

GOVERNMENT OF INDIA  
ARCHÆOLOGICAL SURVEY OF INDIA  
CENTRAL  
ARCHÆOLOGICAL  
LIBRARY

ACCESSION NO. 20/47

CALL No. 721.1202/sto

D.G.A. 79



16.25

A TREATISE  
ON  
SHORING AND UNDERPINNING.





A TREATISE  
ON  
SHORING AND UNDERPINNING

AND GENERALLY DEALING WITH  
*RUINOUS AND DANGEROUS STRUCTURES.*

BY  
CECIL HADEN STOCK.

THIRD EDITION, REVISED BY  
FREDERIC RICHARD FARROW,

FELLOW AND GODWIN BURSAR OF THE ROYAL INSTITUTE  
OF BRITISH ARCHITECTS.

WITH NUMEROUS ILLUSTRATIONS.

LONDON:

B. T. BATSFORD, 94 HIGH HOLBORN  
1902.

721.1235  
SEA

B194  
94 '03

BRADBURY, AGNEW, & CO. LD., PRINTERS,  
LONDON AND TONBRIDGE.

**CENTRAL ANTHROPOLOGICAL**

LIBRARY

Acc. No. 20147

Date. 21. 3. 55

Call No. 721.1202/510

## PREFACE TO THE THIRD EDITION.

---

THE very able manner in which this work was originally prepared by the author has established it as the leading authority upon the subject, and in revising it for a third edition the present writer has, after careful consideration, found it undesirable to re-write any considerable portion; indeed it would be impossible to do so without sacrificing something of that clearness and conciseness which so strongly characterize the book, and which render it of such great value in inculcating the principles of Shoring and Underpinning, so far as is possible without practical experience on the part of the student.

Extracts from the "London Building Act" of 1894 have been introduced in place of those from the Act of 1855, in force at the date of the first and second editions, which it has superseded.

Students and practitioners alike cannot be too strongly advised to place the greatest reliance on the principle which the author was one of the first to lay down, *i.e.*, the infliction of the minimum of disturbance to decrepit or dangerous structures in the practical application of shores for their support.

The author's methods of reducing as much as possible the number of needles and wedges employed are not universally adopted, but even a slight consideration of the advantages obtained by following his method should convince every student of the superiority of the arrangements shown and explained in this work.

FREDERIC R. FARROW, F.R.I.B.A.

7, NEW COURT,  
LINCOLN'S INN.  
*June, 1902.*





## PREFACE TO FIRST EDITION.

---

THE object which the author of the following treatise has in view is, as far as he can, to supply a want which has for some time been felt among the younger members of the architectural profession. It has been impossible hitherto, from the author's own experience, to get up the subject of shoring and underpinning, whether as a necessary part of the education of an architect, or for an examination, without a wearisome search in different libraries for the scraps of information on the subject, scattered about among the works of various authorities; and the difficulty of obtaining information in this way has also been considerably enhanced by the fact that two of the best authorities on the subject write in a foreign language. Consequently the student has been obliged, at a great sacrifice of time, to fall back upon the expedient of sketching and measuring existing cases; an admirable method in its way, but which would be more interesting and instructive (especially as what one most wishes to know is very often hidden out of sight) if some previous knowledge of the subject had been acquired. Accordingly the following pages comprise a careful collection of all the authorities, together with a few additional notes and sketches made from actual experience with the work.

The shoring and underpinning of the towers, columns, and arches of mediæval churches or other old buildings, which have succumbed after having served their purpose well for many years, is a subject too wide and complicated to be thoroughly investigated in a text-book such as this; a few examples however are given in Chapter VI., and methods are described in which some one or two suppositional cases should be treated.

Instances of this class are, however, comparatively rare, and so varied in their character, that each requires to be treated in its own peculiar way ; and it is impossible to lay down any fixed rules, or to prescribe any definite methods by which shoring and underpinning may be successfully carried out in every case. But in the more general cases of shoring, such, for instance, as are met with every day in London or other large towns, where one house is so much like another in its purpose and construction, it *is* possible, more or less, to prescribe methods which will answer as well in one case as in another ; and it is more the purpose of this book to explain *these* methods and the rules involved in them, as they are more useful to the student, and come into the everyday practice of the majority of architects.

Shoring and underpinning, and dealing with ruinous and dangerous structures, is one of the subjects of which a knowledge is required in the new examination for admission into the Royal Institute of British Architects ; and the author has consequently been careful to compile this treatise with a view, as far as possible, to enable a student to answer any question that may be set on this subject.

CECIL HADEN STOCK.

PARLIAMENT MANSIONS,  
VICTORIA STREET, WESTMINSTER,  
May, 1882.

A TREATISE  
ON  
SHORING AND UNDERPINNING.

---

CHAPTER I.  
INTRODUCTORY.

THERE is, perhaps, no place where the principles of Shoring and Underpinning ought more fully to be understood than poor London, founded upon treacherous clay, built of bricks, and abounding in ruinous buildings, where everything is done in such a desperate hurry that anything that comes to hand seems to be used as a building material by so many of our builders, with, no doubt, the reflection on their part, "At all events it will last our time." The delinquencies of the builder and the treachery of the soil are, however, evils which are common to most places; and the student in the art of shoring can hardly complain of a scarcity of examples to examine. In London, at all events, he has only to turn sharply round the corner of a street and he will run against a huge obstruction in the middle of the footpath, the feet and sole-piece of a system of raking shores. He will, doubtless, at once take out his notebook and rule, and jot down the scantlings and the position of the separate struts; but when he comes to examine how the whole system is wedged up, he finds that he is baffled by the sole-piece being so buried in clay and dirt that he can elicit no definite information from it. This is nearly always the case

when work is examined without any previous acquaintance with its principles ; and it is the desire of the author to instil into the mind of the reader a sufficient acquaintance with the principles and the terms used in shoring and underpinning, that he may afterwards with confidence perfect himself in the practical knowledge of the subject by sketching and measuring, and by questioning foremen engaged upon the work.

It is always necessary, in attempting to obtain information from a workman, to go well armed with terms ; for as a rule he takes it for granted that you understand the phrases he uses, and vouchsafes no explanation concerning them. However, this is always the best way to gain practical knowledge upon anything : see the work begun and carried out to the end, go into its object, criticise it if possible, and consider whether, from your knowledge of the subject, it could not have been done better some other way. No student should be content with the knowledge he had gained simply by reading a book.

The mathematical investigation of the nature of the forces brought into play in the case of raking shores, though it can hardly be said to be absolutely necessary, is still well worth the attention of the reader ; for it gives him an altogether superior grasp of the subject, and makes him feel competent to undertake the most difficult problem it can afford. The investigation of the nature of strains comes, of course, into many other of the studies of an architect, and the time spent in considering the proof of formulæ employed can never be said to be spent in vain. But, for the convenience of those who may not be acquainted with the science of trigonometry or statics, the theoretical has not been allowed to interfere too much with the practical side of the subject ; and the mechanics of raking shores have been banished to a chapter by themselves at the end of the book, so that those who do not understand them need not trouble themselves to read them at all.

As there are now so many and varied subjects connected with our profession, making it almost an impossibility to gain a sufficient practical knowledge of all of them, there is every

reason to believe that there will be in the future a demand for specialists: that is to say, an architect having on hand some work which has not before come much within the range of his practice, might be glad to consult with some other member of his profession who had made a special study of that one particular subject. And so, if any of the readers of this book feel that they have any inclination to make a special study of shoring and underpinning, and generally dealing with ruinous and dangerous structures, they will find it a pleasing and interesting pursuit, having an element of danger and excitement about it sometimes which gives it a superior charm over many other of the architect's duties.

When once the study and practice of shoring has been acquired, there will always be found, especially in London, ample scope for the specialist in this branch of the profession to exercise his ingenuity; for there is scarcely ever a house cleared away for the erection of a new building without its being necessary to shore up its neighbours on either side. And so this subject cannot be too well understood by all architects, for many accidents occur from the shoring being left to the rule-of-thumb of the foreman employed on the works, without any supervision by some more responsible person.

We shall now proceed to describe the different methods used in shoring and underpinning, taking first into our consideration the ordinary every-day cases to be met with in London and other brick-built towns.

## CHAPTER II.

## ON RAKING SHORES.

WE shall describe in this chapter only the ordinary use of raking shores, reserving the different varieties of this method to be considered by themselves in another chapter.

In Plate I. Fig. 1, there is depicted an example of the raking shore in its most simple form, i. e. with only one principal strut. Let us suppose it to be supporting a brick-wall, 9 inches thick and 20 feet high from the ground, A C; then A B is the principal strut, called a shore. E is a deal, called the wall-piece, 9 inches wide and 3 inches thick, and long enough to take the foot of the secondary strut G. In this wall-piece, about 2 feet from one end, a rectangular hole is cut and a small piece of wood D, called a needle, or by some workmen a tossle, or joggle, is inserted, projecting about  $4\frac{1}{2}$  inches on either side of the deal. A half header is taken out of the wall near the top and the wall-piece placed in position, the needle fitting into the hole thus prepared. The other end of the needle, projecting beyond the face of the wall-piece, serves as an abutment to the head of the shore at B. For additional security a wedge-shaped piece of wood, C, called a cleat, is nailed on to the wall-piece just above the needle, and prevents it from being forced out of its place by the upward pressure of the shore A B. F is a balk of timber, called the footing block, or sole-piece, let into the ground, or if the ground be soft, laid upon a small platform of timber. A cleat is nailed upon the upper side of the sole-piece at A to prevent the foot of the shore from slipping. All these parts in connection with the shore will be taken more in detail further on in this chapter: at present let it suffice only to name them and describe their functions.

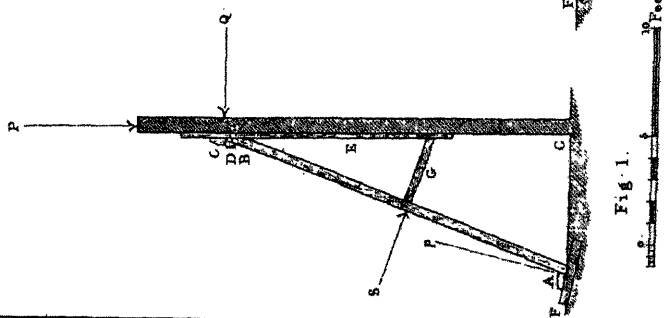


Fig. 1.

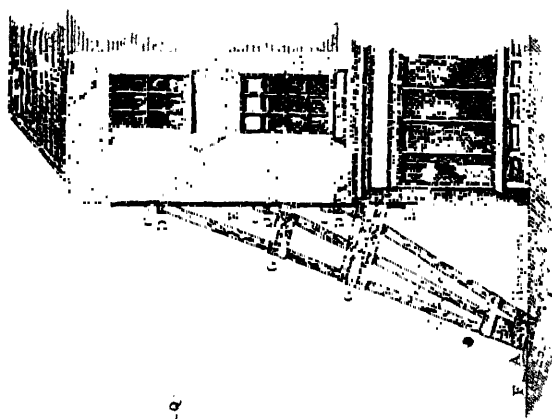


Fig. 2.

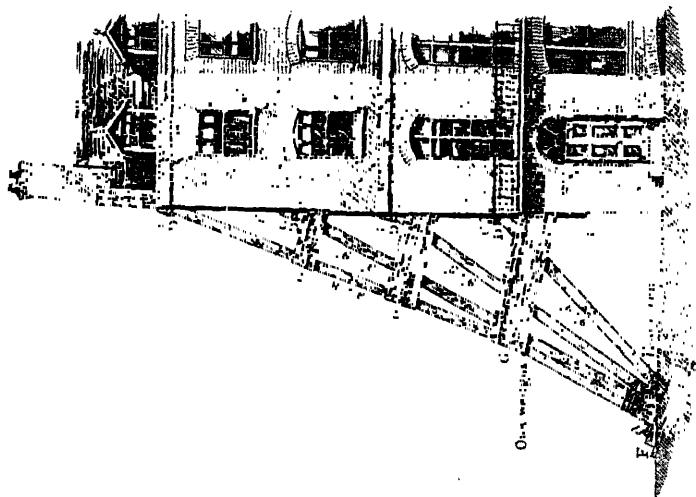


Fig. 3.





Now, the object of this shore is to prevent the wall from being turned over by the thrust caused by a house leaning against it. In considering the resistance to be offered to this thrust, though it may but seldom be the case, yet we must always be prepared for it at its greatest magnitude, and that will be when it is great enough to upset the wall. The direction of this thrust will of course be at right angles to the wall, and it will act at a point near the top, i. e. where the head of the shore presses against the wall, as shown by the line  $Q$  in the figure. Now, the most convenient way to overcome such a thrust, would be, of course, to place a strut at right angles to the wall, or in other words, in a line with the direction of this thrust  $Q$  (as in the case of a flying shore). But when this cannot be done a raking shore is necessary, and it is easy to see that as soon as the position of the strut is altered from a horizontal to an inclined position, a certain percentage of force is wasted in an endeavour to thrust up the wall; so, taking into consideration the fact that action and reaction are the same, there may be said to be two forces brought into play in the case of a raking shore, one the thrust ( $Q$ ) of the wall, and the other a force  $P$ , exercised vertically by the weight of the wall above  $D$  upon the head of the shore, tending to keep it down, in which the weight of the shore itself must be taken into account. The two forces, acting at right angles to each other at the point  $B$ , must have by the law of forces an equivalent single force acting in some direction between the angle of the directions of these two forces; and this force is called the resultant. Now, this resultant does not act down the direction of the shore itself, but in some direction which varies as there is more or less thrust ( $Q$ ) of the wall; and this direction is found by mathematics to be always outside the angle which the shore makes with the horizon, as the line  $pA$ ; consequently the balk or sole-piece must not be put at right angles to the direction of the shore, but at an angle, as near as can be judged, at right angles to a mean of all the directions the resultant may take;


and this will be, as near as possible, at right angles to the line  $p A$ .

Now in practice this truth is of the greatest convenience, for the foot of the shore, being gently levered along the sole-piece, is compressed tighter and tighter, and so the necessity of wedges is dispensed with entirely. In order to facilitate this operation of levering the shore into its place, a groove or slot is cut in the under side of the foot of the shore, large enough only for the carpenter to insert the end of a crowbar as a lever. (See Plate II. Fig. 6.) This was the method employed in most of the shoring executed for the Metropolitan Board of Works, and it may be considered the best; for, in dealing with structures that are really in danger of falling, the greatest care must be taken to avoid all blows with a hammer or mallet, such as are necessitated by the use of wedges at the foot of the shore.

From what has been said about the tendency of the shore to lift the wall, and the consequent reactionary force  $P$ , which keeps the head of the shore down, it is obvious that the needle must not be placed too near the top of the wall, for, unless there is sufficient weight upon its head, the shore will rise and burst up the courses above it.

There is yet another force brought to bear upon a raking shore which we must not forget to mention, and that is a cross strain,  $S$ , acting at right angles to the shore, and tending to bend it inwards, the truth of which may be investigated in the chapter on the Mechanics of Raking Shores, at the end of the book. It is to counteract this cross strain that the secondary strut  $G$  is necessary, and in cases where three or four shores are combined in one system, as in Figs. 2 and 3, this strut answers the double purpose of counteracting the cross strain and binding the shores together.

Having now considered briefly the nature of the forces brought into play in the case of this single raking shore, and the practical lessons that they teach, it only remains to be said that where there are any number of shores in a system, each separate shore in that system is subjected to the same forces or strains as have



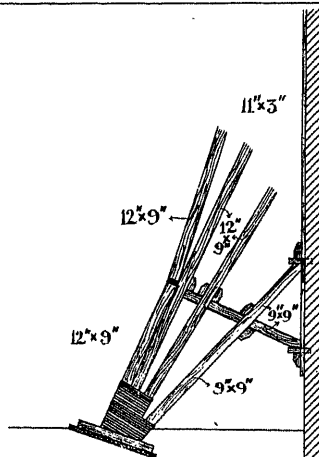


FIG 1.

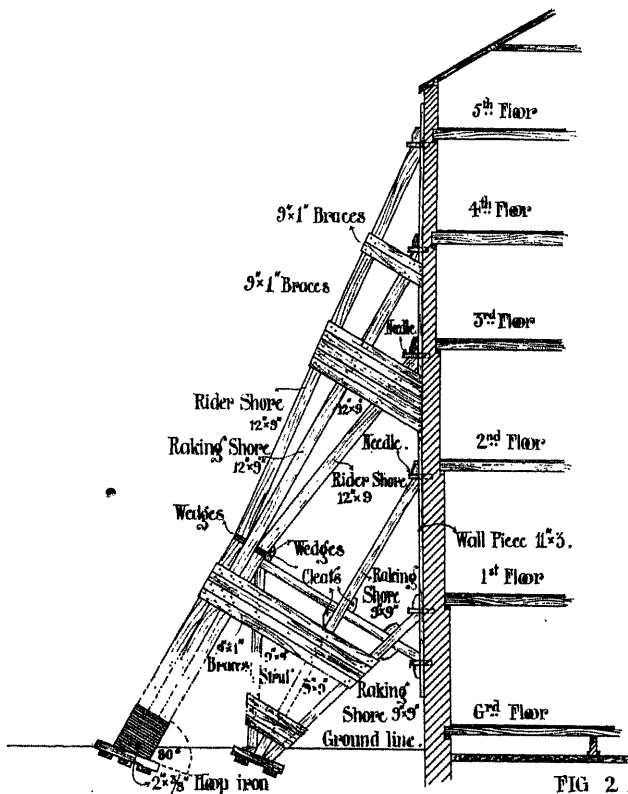



FIG 2.

Scale of  Feet.

been described in the case of Fig. 1. In fact, this figure may be considered as the outer shore in a system of two or more shores. It has been used here more for convenience of description than as a method to be adopted. As a general rule, two or more shores should be used in a system.

With regard to the scantlings of the timbers used in raking shores, as they are for the most part but temporary erections, builders generally use such timbers as they may have by them, which are too rough for better work. But in order to be quite sure that the timbers are strong enough to resist the utmost strain that can be put upon them, it is always as well to use the formulæ, which are appended, with an example, at the end of this chapter.


We will now go on to consider Fig. 2 in Plate I. This is the raking shore most commonly seen ; it is simply a triple arrangement of that described in Fig. 1. The wall-piece is made much longer in consequence, and has three holes cut in it, and three needles inserted with their cleats nailed above each. The outer shore is called the top raker, the middle shore the middle raker, and the lowest is called the bottom shore. As the top raker of this system is a much longer shore than that shown in Fig. 1, it will be necessary to strengthen it with more than one secondary strut. This is done by nailing pieces of timber about 1 inch thick, and from 6 inches to 9 inches wide on either side of the shores, as shown at G in Figs. 2 and 3. These braces are brought home against the wall, and nailed to the sides of the wall-piece (which, if wider than the shores, is best notched out to receive them), and their position is generally just below the points where the needles enter the wall. As the bottom shore cannot conveniently have a secondary strut, it is generally tied up by a brace similar to those at G ; this brace is also useful to bind the three shores together as they approach each other at their feet, and helps to render the whole a homogeneous system, incapable of turning about or warping when tried by the thrust of the wall. Hoop iron is also nailed round and round the feet of the shores to prevent any possibility of their separating.

In Plate I. Fig. 3, we have a much larger and more complicated system of shores. It differs from the other in this respect, that the top raker or rider shore, as it is called in this case, instead of coming down to the ground as before, is made to spring from the back of the shore immediately below it. This is, of course, done because it would be impossible, except at considerable expense, to obtain so long a piece of timber as would otherwise be required. In some cases the foot of this rider shore is made to rest upon a large cleat, nailed to the back of the shore below, but the best method is to let it rest upon another piece of timber of the same scantling, which, secured to the back of the shore below, goes down to the sole-piece, as shown in the Fig. 3. This rider shore may be of a smaller scantling than the others.

Now this plan, though it answers very well in a case like Fig. 3, should not be allowed in the case of Fig. 2 (unless there was great difficulty in obtaining a piece long enough for the top raker), for this reason, that the power of wood to resist compression is very much impaired by any cross strain that may be put upon it. But still, if in the case of Fig. 2 the house was really in imminent danger of falling, or was very much out of the perpendicular, it would not only be advisable, but even absolutely necessary, to keep the top raker in two pieces, and fix it as in Fig. 3, because the disturbance and blows upon the wall, which would be caused by the moving about and fixing so large and heavy a piece of timber, might result in bringing about what it is the object of the shores to prevent, viz., the total wreck of the house. But whenever the method of a rider shore is adopted, the shore below it must be made proportionately stronger, to enable it to resist the cross strain.

This may be done either by increasing the scantling of the raker, from the back of which the rider shore springs, or by solid struts between the rakers, as shown in Fig. 1, Plate II.

In Fig. 2, Plate II., is shown an example of an extended application of this latter method for a lofty building of several floors.





PLATE, III.

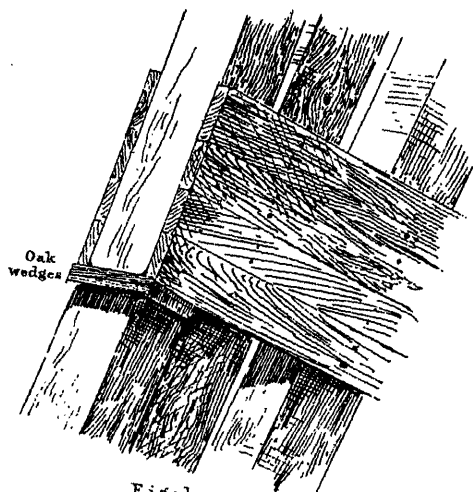


Fig: 1.



Fig: 2



Fig: 3.




Fig: 4.

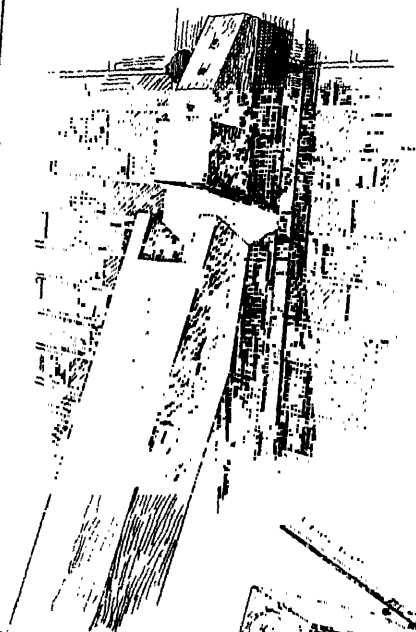


Fig: 5.



Fig: 6.

Iron  
dog

When very long timbers are required for the rakers, they are sometimes scarfed. The scarfs should be square shouldered, with fish-plates of iron or oak plank, and should be made with great care.

In those cases where it is of considerable importance that the shores should be kept as light as possible, a great reduction of weight may be effected by trussing the timbers with cast-iron or hard wood struts, and wrought iron or mild steel tie-rods. The trussed timbers are, however, more expensive, and though lighter in weight are more awkward to handle, so that they are rarely employed in shoring.

Whenever possible, the method described for Fig. 1 of levering the shores into their positions on the sole-piece should be used; but if it is found impracticable to compress sufficiently the middle rakers in this way, oak wedges can be used, care being taken to drive them home gently, the object being to support the wall, not to thrust it over. The rider shore is compressed by two oak wedges, gently driven home on either side of the foot where it meets the timber secured to the shore below, as shown in Plate III. Fig. 1. The system of shores which has only two struts is a very common one, its principles and construction being in every way similar to what we have already described.

The following paragraph may be taken, as a general rule, for the number of shores to be employed in each system, and the scantlings that should be given to each:—

For walls from 15 ft. to 30 ft. high, two shores are necessary in each system.

|       |                     |   |       |        |
|-------|---------------------|---|-------|--------|
| Ditto | 30 ft. to 40 ft.    | „ | three | ditto. |
| Ditto | 40 ft. and upwards, |   | four  | ditto. |

Taking the angle of the shore at  $60^{\circ}$  to  $75^{\circ}$ ,

For walls from 15 ft. to 20 ft. high, 5 in.  $\times$  5 in. may be the scantling for each shore.

|       |                     |   |                       |        |
|-------|---------------------|---|-----------------------|--------|
| Ditto | 20 ft. to 30 ft.    | „ | 6 in. $\times$ 6 in.  | ditto. |
| Ditto | 30 ft. to 35 ft.    | „ | 7 in. $\times$ 7 in.  | ditto. |
| Ditto | 35 ft. to 40 ft.    | „ | 8 in. $\times$ 8 in.  | ditto. |
| Ditto | 40 ft. to 50 ft.    | „ | 9 in. $\times$ 9 in.  | ditto. |
| Ditto | 50 ft. and upwards, |   | 12 in. $\times$ 9 in. | ditto. |

The systems of shores should not if possible be more than from 12 feet to 15 feet apart; but if they are placed nearer to each other than this the scantlings may be made lighter, which will be of great advantage in the case of a really dangerous structure for the reasons mentioned above.

The general arrangement and construction of the raking shores which are most commonly used having been explained, it now remains only to say a few words with regard to their details. As these can best be explained by the figures on Plate III., it will be sufficient merely to refer to them, pointing out their uses.

The meaning of Fig. 1 has already been explained; the oak wedges, which compress the rider shore, have been driven home, and sawn to a neat appearance. Fig. 2 is the needle, which in good shoring is made out of a piece of wood about 4 inches square and 1 foot long, cut down at one end to the size required to fit the hole made in the wall; a shoulder is thus formed to butt against the wall-piece, and a good strong abutment is afforded for the head of the shore. Fig. 5 is a sketch showing the needle in position in the wall-piece, with the cleat above it, and the manner in which the head of the shore is notched to fit the under side of the needle. This is a very necessary expedient; for the author has known an instance of the top raker in a system of shores, a long and heavy piece of timber, having been blown down by a sudden gust of wind—seriously injuring two workmen who were underneath it at the time—from the neglect to notch the head of the shore, or otherwise secure it in case of its becoming loose. Iron braces, as Fig. 3, called iron dogs, are sometimes used for this purpose, as also for securing the feet of the shores to the sole-piece, and the foot of the rider shore to the shore below it. It is important that the pointed teeth of the iron dogs should be at right angles and not at an acute angle with the shank. It will be noticed that, in the sketch Fig. 5, the wall-piece is secured to the wall with iron hooks, a detail of which is shown in Fig. 4; these are convenient to hold in position during the insertion of the

needles and fixing of the shores. Fig. 6 shows the method of levering the feet of the shores along the sole-piece. A cleat should be nailed to the sole-piece against the foot of the outer shore, and the spaces between the shores, if they do not quite touch, should be filled in with a bit of stuff.

The greatest care must be taken that the sole-piece rests upon a firm foundation of solid ground, for the efficacy of the shore depends very much upon an unyielding base. It should first be ascertained that there are no cellars or vaults under the spot that the sole-piece is to occupy, and all made ground, soft clay, &c., should be avoided if possible; but if, as often happens, it is impossible to obtain a firm foundation without going to a considerable depth, the sole-piece must rest upon a carefully made platform of timbers, laid across each other, which will press equally upon the ground all over. This platform may be laid level, and the sole-piece raised to the required inclination by wedge-shaped pieces of oak fixed upon it; or it may be laid at once to the inclination of the sole-piece. In some cases, where great pressure is likely to come upon the shore, a good bed of concrete is prepared, and the platform which takes the sole-piece laid upon it.

When a space has been cleared away, and raking shores are erected to support the surrounding buildings, they must not be put up indiscriminately, without reference to the plans and sections of the new building which is to occupy the space; but care must be taken that they shall interfere with the building operations as little as possible. As the new building rises to the under side of the bottom shores, they are taken down, the middle and top rakers being left in position till they are reached in their turn. The foundation of the shores should be left untouched until all are taken down.

It is obvious that the more inclined the shore is with the horizon, the greater is the lateral thrust it will exert. An angle of  $40^{\circ}$  is considered to be the best inclination for raking shores; but there is very seldom room for so great a spread at the foot as this requires, and they are more often raised to an

angle of  $60^\circ$  or  $70^\circ$ . But it should always be borne in mind that the more the shores are brought in at the feet, the less will be the lateral thrust they will exert against the wall.

*Formulae for determining the pressure brought to bear upon a raking shore by the house which it supports.*

Referring back to the example (Plate I. Fig. 1), we have seen that there are two principal forces, P and Q, brought to bear upon the shore. Before we can determine what effect these two forces have in compressing the shore, we must first discover the magnitude of each of them separately.

To find the maximum horizontal thrust Q exercised upon the wall (Q being in cwts.), we must use the following formula:—

$$Q = \frac{W \times t}{2BC}, \dots \text{I.}$$

Where W is the weight of the wall in cwts.,  $t$  is the thickness of the wall at the ground line in feet or parts of a foot, and BC is the distance of the head of the shore from the ground, also in feet.

To find the vertical force P, to be expressed in cwts.:—

$$P = Q \tan. \theta^* - \frac{w}{2}, \dots \text{II.}$$

Where  $\theta$  is the angle the shore makes with the horizon, and  $w$  is the weight of the shore itself in cwts.

Having found by the above formulæ the values of Q and P, we can now find the compression F down the shore which they produce, by the formula—

$$F = P \sin. \theta + Q \cos. \theta, \dots \text{III.}$$

where F is in cwts. and  $\theta$  is the angle the shore makes with the horizon.

\* The reader, even if he has never before been acquainted with the trigonometrical symbols, sin., cos., tan., &c., need not be at all alarmed at their appearance here; for if we know how many degrees there are in the angle  $\theta$ , we have only to refer to some table of natural sines, cosines, tangents, &c., and we shall find that the expression  $\tan. \theta$  is transformed into a convenient decimal. For instance, the shore AB in Pl. I. Fig. 1 makes an angle of

Now, taking the example in Plate I. Fig. 1, a wall 20 feet high, with a frontage of 10 feet, is supported by a raking shore of fir, 4 inches by 4 inches, the head of which B is 16 feet from the ground A C. The angle  $\theta$ , or B A C, is  $70^\circ$ , and by referring to a table of natural sines, &c., we find that  $\sin. \theta$  is .93969,  $\cos. \theta$  is .34202, and  $\tan \theta$  is 2.7474. Taking the wall at 1 cwt. per cubic foot, its weight W will be 150 cwt., and its thickness  $t$  is 9 inches, or  $\frac{3}{4}$  of a foot. The weight  $w$  of the shore itself is  $\frac{5}{8}$  cwt.

The value of Q is obtained from I.

$$Q = \frac{W \times t}{2 B C} = \frac{150 \times \frac{3}{4}}{32} = \frac{112\frac{1}{2}}{32} = 3\frac{1}{2} \text{ cwt. approximately,}$$

i. e. the maximum horizontal thrust is  $3\frac{1}{2}$  cwt.

The vertical pressure P is obtained from II.

$$P = Q \tan. \theta - \frac{w}{2} = (3\frac{1}{2} \times 2.7474) - \frac{5}{16} = 9\frac{1}{4} \text{ cwt.}$$

The compression F down the shore is found from III.

$$F = P \sin. \theta + Q \cos. \theta = (9\frac{1}{4} \times .93969) + (3\frac{1}{2} \times .34202) = 9\frac{7}{8} \text{ cwt. approximately;}$$

i. e. the shore as a post has to resist a pressure of  $9\frac{7}{8}$  cwt.

To find whether the shore is strong enough to resist this pressure, we must use the formula for a long, square post,

$$L = a \times \frac{d^4}{l^3},$$

where  $a$  is 15.5 for fir,  $d$  is the least width in inches, and  $l$  is the length in feet;  $L$  being the safe load in cwts. that may be put upon it.

Very often, however, the breadth of a shore is double its width, i. e. the sides of the section bear a proportion to one another of  $\frac{2}{1}$ ; consequently, as we get twice the resistance, we multiply  $L$  as found by the above formula (in which  $d$  in this case is the lesser side) by 2 for the safe load required.

$70^\circ$  with the horizon, A C. We look, say in Molesworth's "Pocket-book of Engineering Formulæ," for the tables of natural sines, &c., and we see that  $\tan. 70^\circ$  is 2.7474.

When the section is 6 inches by 4 inches, for instance, the sides bear a proportion to one another of  $\frac{3}{4}$  or  $\frac{3}{2}$ , consequently we multiply  $L$  as found by the above formula (in which  $d$  is the lesser side) by  $\frac{3}{2}$  for the safe load required; and so for all scantlings.

It has, however, been found by experience to be always best to make shores of square timber. The shores erected by the London County Council are generally of a square section, and timber of this kind can easily be obtained from 4 inches by 4 inches to 13 inches by 13 inches.

In the example before us the shore has a square section; then,

$$L_s = 15.5 \times \frac{2.56}{2.89} = 13\frac{3}{4} \text{ cwt.};$$

i. e. the safe load which the shore will carry is slightly in excess of the compression  $F$ , to which it is actually subjected.

In this manner the top raker in a system of shores can be tested.

The compression down the middle raker and bottom shores can also be determined in the same way, a separate value of  $Q$  being worked out for each. It will be found that this compression increases as the shores are placed lower down the wall; but as the power of resistance in the lower shores is also considerably increased from their being so much shorter than the top raker, they will be quite strong enough if made of the same scantling.





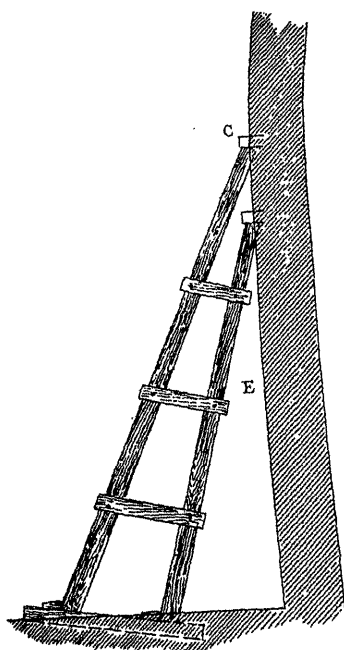


Fig: 1.

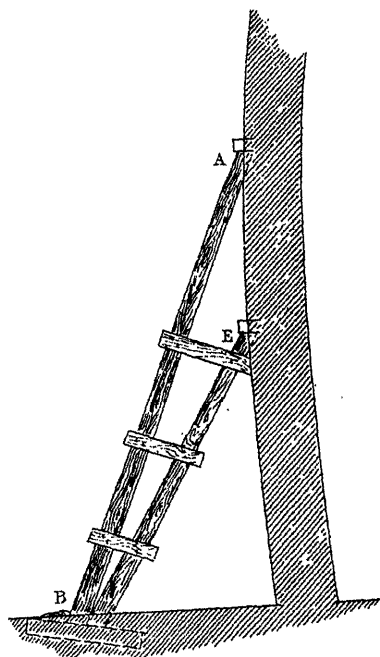


Fig: 2.



Fig 3.

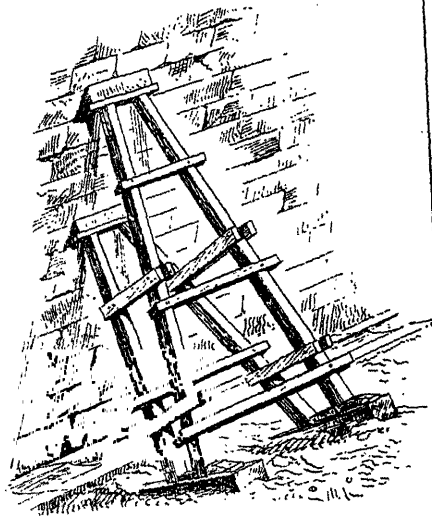


Fig. 4.

*C. Haden Swick Del.*

## CHAPTER III.

ON A FEW ADDITIONAL PRINCIPLES, VARIETIES,  
AND USES OF THE RAKING SHORE.

THOUGH we but seldom see any other modifications of the raking shore than those which have already been described, yet there are certain cases which call for special adaptations of this system ; and it is for the carpenter to prescribe that method in each case, which his skill suggests or his experience dictates. It would, of course, be needless to describe every variety and use of the raking shore ; but some few additional remarks (for which, with the diagrams, the author is indebted to M. Viollet-le-Duc's article on Shoring), may possibly be useful.

It is usual in most cases, where more than one shore is used in a system, to spread them out at the top and bring them together at the foot ; but this should not be done if there is a sharp bend in the wall, as at C in Plate IV. Fig. 1, but the shores should be placed as is indicated in the figure, i. e. they should be farther apart at their feet than at their head. For (as it is necessary, in all cases where there is a prominent bend or rupture in a wall, that the head of the outer shore should rest exactly above the point where this bend or rupture occurs), if the usual method be adopted the head of the lower shore will act at the point E ; but it will be dangerous to exert a horizontal pressure upon the wall at this point, for it will only tend to aggravate the rupture below the bend at C. But when a wall is bent in a uniform manner as in Fig. 2, the shores are best placed in the usual way, approaching together at the foot ; for while the upper shore A B takes the load, the lower shore E B can exercise a more effectual resistance to the bend of the wall. Thus it is always best to employ more than one shore in a system.

Fig 3 shows the way in which the head of a raking shore may be fixed in a masonry wall. A hard header of stone is built into a hole made in the wall, projecting beyond the face of the old work, and a piece of heart of oak is placed underneath it as a seating or needle for the head of the shore.

When two or more shores are employed in a system they should never be parallel, but (to quote M. Viollet-le-Duc), "they should always form a triangle or a portion of a triangle, for this reason, that a triangle can never be thrown out of shape; when braced, shores which are not parallel present an entirely homogeneous resistance; whereas if they are parallel they will become bent, however well braced they may be."

This truth may be extended further; and when two systems are combined in one, as is sometimes done when great strength is required, they should not be placed parallel to each other, but they should form a triangle on plan, as is shown in Fig. 4 in perspective. This kind of shore, if it is well braced, is exceedingly strong, and suitable to prevent the pressure of the earth from overturning a terrace wall.

It is often possible to make use of a raking shore, not only as a support, but also as a means whereby a wall may be pushed back again from a leaning to an upright position. An instance of this has come under the author's notice in the case of one of the walls of a large warehouse, which had gradually been pushed out of the perpendicular. The foundations were examined and found to be in a comparatively good condition, and the face of the wall, though out of the perpendicular, presented a uniform appearance, i. e. there were no serious bulges or cracks perceptible on its face; and consequently the idea of restoring its perpendicularity seemed possible to be put into execution, without any danger to the wall itself. Accordingly, raking shores were placed at intervals along the wall, and a powerful screw jack fitted under the sole-piece of each system; the connections of the quoins with the return walls were then cut away, and the roof and floors of the buildings, having first been propped up with posts and struts from the basement to the

topmost story, were also cut off from all connection with the wall. A wedge-shaped fissure was next cut in the brickwork, at a point near the base of the wall on the internal face, and the space thus cut out was filled up with sand. The screw jacks were turned evenly and gently, and the wall, squeezing the sand out of the fissure, was gradually pushed back by the shores into its original position. The roof and floors were again firmly connected with the brickwork, the posts and shores taken down, and the whole then presented an appearance as strong and satisfactory as when it was first erected.


Another method used for bringing back into the perpendicular the two opposite walls of a building, which have been thrust outwards by a roof or vault, though it is perhaps hardly *à propos* here, may as well be mentioned. It consists in fixing bars of wrought iron across the building from one wall to the other, which pass through to the outside, and are then screwed to large nuts, or washers, placed against the external face of the walls. Fires are lighted under these bars, and as the metal expands the washers are screwed up as tightly as possible. The fires are then extinguished, and when the bars begin to cool, the force of their contraction gradually draws the walls together.

But to return to the raking shore, another of its many uses is to steady a wall whilst it is in process of being underpinned; these raking shores should be left in position for some time after the works have been carried out, so as to enable the wall to take its bearing upon the new work without danger of disruption.

The best wood in which all shores should be made is undoubtedly the fir, because its grain is always straight, and it can be obtained in long pieces. It is difficult to make good shores of oak, as it is generally of a middling length, has a twisted grain, and is heavy and more troublesome to lift in consequence. Oak ought to be used, however, in preference to all other woods for the wedges, seatings, &c., and even for the

sole-piece (though this is seldom done), because its texture does not crush under the load like that of fir.

Care should be taken that the shore is thoroughly well put together, that all the joints are made to fit exactly, and that the foot of each strut has a perfect bearing upon the sole-piece. Nothing is more satisfactory than to see a shore well made, and those who design and construct in this art cannot help feeling, in such a case, a pang of regret when their handiwork is cleared away.



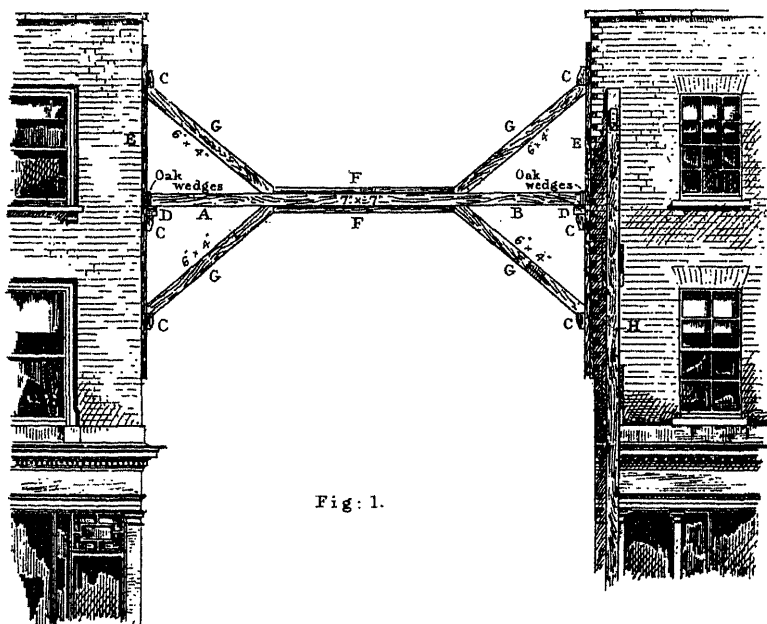


Fig: 1.

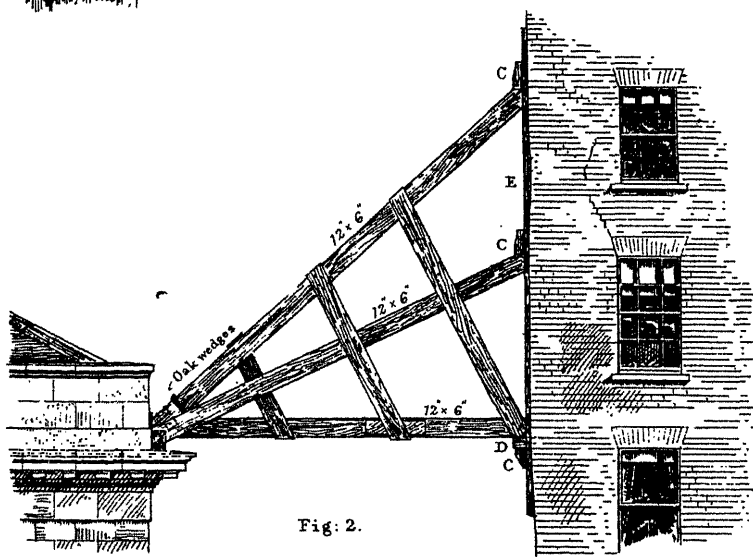


Fig: 2.

Scale of  $\frac{1}{4}$  inch = 1 foot

## CHAPTER IV.

## ON HORIZONTAL OR FLYING SHORES.

WHEN a house is taken down in a street, and the party walls of its neighbours on either side require supporting, and if the space between the two is not greater than about 32 feet or 33 feet, horizontal struts, reaching from one wall to the other, are employed; these are called flying shores.

In Plate V. Fig. 1, is depicted the usual method of constructing these shores. Two wall-pieces E are provided and a rectangular hole cut in the centre of each for the insertion of the needles D, which rest in holes cut in the walls, just as has been described in the case of raking shores, a cleat C being nailed below them for additional security. The horizontal strut A B is compressed by oak wedges driven together above the needles D, and it is stiffened by the raking struts G, which butt against cleats C on the wall-pieces, and against straining pieces F, securely nailed to the top and under side of the horizontal strut A B.

It will be easy to see that by this method a very effectual resistance is offered to any inclination of the houses to fall in upon each other; but it will also be necessary, in most cases where flying shores are employed, to support the angles of the walls towards the street with raking shores, as shown at H in Fig. 1. Of the two houses, however, here represented, the one on the left hand is secure, and needs no shoring at all, having been built independently of the house that has been cleared away, or in other words, the return wall belongs to it exclusively, and has not been shared as a party wall by the house adjoining; consequently the flying shore has to resist the thrusts of the opposite house only. But when both are party walls it will be best, although not theoretically necessary, to allow sufficient



strength in the shore to resist the thrust of both the houses together; and it will also be necessary to support the angles of both the walls, both in the front and at the back, with raking shores.

The thrust exercised by the wall of the house on the right-hand side in Fig. 1 may be found at any point in its height by the useful formula,

$$Q = \frac{W \times t}{2 BC},$$

where  $Q$  is the thrust in cwts.,  $W$  is the weight of the wall in cwts.,  $t$  is the thickness of the wall at the ground in feet or parts of a foot, and  $BC$  is the distance, in feet, from the ground to the point at which it is desired to ascertain the thrust.

It is obvious from the laws of leverage, that the best position for the shore to occupy is near the top of the wall, as shown in the figure; and by working out examples by the above formula, which is framed on the supposition that the wall is just falling, it will be found that the thrust will increase considerably as we come lower down the wall. Consequently, if from some inconvenience, the shore cannot be placed near the top of the wall, it must be made proportionately stronger the lower it is brought down. It is a common and a good practice to place two or more flying shores one above the other, in the same perpendicular plane, thus holding up the wall at every point in its height. In this case it is best if possible to have the wall-pieces in one length from the top to the bottom of the system. If the wall bulges at certain points, as in the figure, or if any projections occur upon its face, the wall-piece must be packed up behind with furring pieces, and so made to press equally against the wall at every point in its length.

The reason why the span of a flying shore was limited, apparently so dogmatically, at the commencement of this chapter, to 32 feet or 33 feet, is because ordinary Dantzic fir cannot easily be obtained in pieces of a greater length than this. Scarfing or joining two lengths into one is not a wise practice in the use of flying shores; for unless the scarf is

executed with greater care than is warranted by the temporary character of the work, it is worse than useless. For it cannot be guaranteed that the horizontal strut will only be compressed in the direction of its axis, but the wall, if it leans forward uniformly, will make its thrust first felt down the upper raking struts, and so produce a cross strain upon the principal strut; and the power of the principal strut to resist this cross strain, even though it is stiffened by the lower raking struts, would be very much diminished by a scarf, especially if the span is considerable, as of course it would be if a scarf was necessary. Thus it is always best to use only one whole piece of timber for the principal strut; and if this cannot be obtained long enough in Dantzic fir, pitch pine must be used, which can be procured in pieces, if necessary, 66 feet long. But unless the houses to be shored are a great height, say from 70 feet to 80 feet high, it would be more economical to make use of raking shores.

With regard to the scantling that should be given to the timbers of a flying shore, the following may be taken as a general rule:—

For spans not exceeding 15 feet, the scantling for the principal strut may be 6 inches by 4 inches, and for the raking struts, 4 inches by 4 inches.

For spans from 15 feet to 33 feet, the scantling for the principal strut may be from 6 inches by 6 inches to 9 inches by 9 inches, and for the raking struts from 6 inches by 4 inches to 9 inches by 4½ inches.

In both cases the straining pieces must be stout enough to give a good bearing to the ends of the raking struts.

The scantlings given above are for shores which occupy a position at about three-fourths of the distance from the ground line to the top of the wall, and which are placed at intervals of not more than 10 feet to 15 feet from each other.

It may sometimes happen that when it would be more convenient and economical to support a house with flying shores, an objection is raised by the owner of the house which it is

proposed to use as an abutment, either because he is afraid of his wall being pushed in by the pressure brought to bear upon it, or because the unsightly appearance of the shores may be prejudicial to his premises. This objection he has a perfect right to make, and he can compel his neighbours—of course at his own risk—to tie in the wall from the back, or, if there is room on their property for the erection of raking shores, to adopt this method of supporting the wall. There was an instance, some years ago, of a case of this kind on the Thames Embankment, opposite the Temple Station of the District Railway, where, although the wall of the house which required support was over 60 feet high, and there was an admirable abutment for flying shores close at hand, yet the more expensive method of raking shores was adopted, no doubt because the adjoining owner objected to have his premises disfigured, as they certainly would be by flying shores butting against them.

We will now go back to consider Plate V. Fig. 2. This is a contrivance which must be employed if the house to be supported is higher than the house which is used as an abutment. It is more convenient, more economical, and more effectual than a raking shore springing from the ground would be, especially if the height of the building is considerable. In fact, in all cases where the span is not more than about 33 feet, and there is no difficulty in obtaining a good abutment, it is always best to employ flying shores in preference to raking shores; for, apart from the consideration of economy, they present a more direct resistance to the thrust, are well out of the way of any building operations that may be carried on below them, and can remain in position without danger of being disturbed; whereas the feet of raking shores are always in the way, and the excavating and pumping which is so often carried on around them, unless great care is taken, is almost sure to loosen their foundations, and so to render them useless.

## CHAPTER V.

## ON NEEDLE SHORING AND UNDERPINNING.

WE have hitherto been dealing only with those methods of shoring which are used more particularly when some precautionary measures must be taken to arrest a dangerous movement in the wall of a building, but which may be said only to assist the foundation in the real task of supporting the wall. We now come to consider the case when the support of the foundation is no longer to be relied upon, and the wall is to be gripped and held suspended in the air by the shores alone, while its lower portion is cleared away entirely, either to be replaced by new work or to remain open for a doorway or shop front. The method employed to support the wall in such a case is called needle shoring: in principle it is the most simple of any, and needs but little explanation; but in practice it requires the greatest care.

It consists merely in cutting holes about 14 inches square through the wall of a building, at intervals of from 5 feet to 7 feet from each other, and inserting through these holes short balks of timber called needles, which are propped up at either end by stout posts, resting upon sole-pieces laid upon timber platforms on the ground. Oak wedges are driven together at the feet of these posts, or the sole-pieces are laid at a slight inclination, and the posts are levered into position in the same way as the feet of raking shores. The needle is thus pressed tightly against the under side of the brickwork, and after raking shores have been fixed as an additional security in supporting the wall, the lower portion can be taken down without fear; the whole weight of the wall and floors being carried by the needles, and transmitted through the posts to the ground. The wall is supported on the principle of a corbel springing

from either side of the needle, and finding its way through the perpendicular joints, until it is met by the line of the corbel springing from the neighbouring needle. It might be supposed from this that the triangular space between the corbels, having nothing to support it, would fall out; but this is not the case in practice, for the adhesion of the mortar is sufficient to hold all the bricks together if the distance from one needle to the other is not greater than about 6 feet or 7 feet. However, if there is any tendency on the part of the bricks in this space to fall, they must be temporarily strutted up from below. In this kind of shoring there is nothing to be gained and everything to be lost by using timber of a small scantling. For the needles, and for the posts as well (unless they are very securely braced to each other), whole timbers (i. e. about 13 inches by 13 inches) should be used.

The above brief description brings us to an end of the three methods of shoring usually employed to support a building; but before we give a practical example of this last method, it may be as well to say a few words here upon the general subject of ruinous and dangerous structures.\*

The first thing of course to be done when a structure is found to be unsafe is to shore it up at once on all sides, either with raking or flying shores, as may be most convenient; but, before we can determine how it can best be restored to a sound condition, a careful survey must be made of all the walls, so that we may find out from the nature of the cracks and bends, and other guiding marks, what is the cause of the failure, and in what direction the fault lies; for in this way only can we know with certainty how and where to apply a remedy. There are, of course, many causes to which the failure may be attributed, all of which should be considered when the building is examined, such, for instance, as the use of bad mortar, the overloading of the wall, the thrust of a vault, or, more commonly,

\* For the convenience of the London reader, the law concerning dangerous structures in the metropolis is appended at the end of this Chapter.

some defect in the foundations.\* But as it would be an impossible and useless task for us to go into all the cases of failure that are likely to occur, and to prescribe here what should be done in the way of remedy in every instance, we must content ourselves with the investigation of one example only, and let it suggest in principle at least what should be done in many other cases.

The failure of the foundations is, as we have said above, the most common cause of ruin in a building, and the method of restoration known as underpinning, which is employed in such a case, is of every-day occurrence; consequently we cannot do better than select this subject in considering the treatment of ruinous structures.

If, after a thorough examination has been made of a dangerous building, and from the nature of the cracks and bends and other evidence of failure in the walls, it is proved beyond doubt that the fault is not to be found in the superstructure, then inspection trenches should be cut, and the foundations examined. At one time it may be discovered that the footings have been built with bricks or stones which are both bad in themselves and improperly bonded in the work; for this is, unfortunately, a very common practice with some builders, to get rid of all their bad bricks, or odd bits of stuff, in the work below the ground. Nothing leads to more disastrous results; for it should be remembered that the lower a stone or brick is placed in a wall the greater is the weight it has to carry, and consequently the very best materials should be used in the foundations of a building. At another time it may be found that the footings have buckled up at either side into the shape of the letter V, from the offsets being too great, or from the fact that back joints have been allowed beyond the face of the upper work. Only heading courses should be allowed in footings, stretching courses should only be used when the footing courses are doubled, and

\* The reader is referred to an excellent paper, by Mr. Edwin Nash, on "Failures in Construction," recorded in the "Transactions of the Royal Institute of British Architects," 1867, vol. xviii.

then the stretching course should occupy a position under the heading course. It may often happen that the concrete or the mortar used for the brickwork below the ground, if the situation is a very damp one, has never properly set from the want of hydraulic properties in the lime used; or the concrete and foundation generally may have been dislocated by the expansion and contraction of the clay on which it rests. Again, the failure may be caused by some defect in the design of the wall below the ground, such for instance as piers standing upon inverted arches which have not sufficient abutment; or if the building be an old one, the materials of which the foundation is composed may have decayed so much in process of time as to be no longer strong enough to carry the superincumbent weight.

Instances such as these may be enumerated by the score, and the time spent in their investigation can never be considered as wasted, for they teach us what to guard against in the future; and in examining a dangerous structure the knowledge of defects in other cases often helps us in finding out the reasons of failure in the case before us.

If a wall whose foundations have thus been discovered to be at fault is in all other respects in a comparatively sound and homogeneous condition, i. e. if there are no very serious cracks or sharp bulges perceptible on its face, or if it is only a few inches out of the perpendicular, it can be restored to a perfectly sound and healthy condition by removing the bad foundations and replacing them, either wholly or in part, with good and reliable new work. This operation is called underpinning.

It is carried out in the following manner:—Raking shores are first erected to assist in supporting the wall, and the ground on either side of it is then dug out at one point only, generally at the centre; and it will depend upon the condition of the brickwork or the masonry of which the wall is composed as to how many feet along the wall this excavation may extend. Good brickwork will carry itself over a span of 6 feet or even 7 feet, and the same may also be said of most kinds of dressed masonry; but when the foundations of a wall have

failed the homogeneity of the material of which it is composed is partially destroyed, and it will not be safe to underpin, as a general rule, more than 3 feet at a time. All the foundation comprised within this dimension, whether it be brick, stone, concrete, wood, or iron, is removed entirely, and a new foundation is commenced upon the solid ground, and built up within the cleared space to the under side of the old work.

Before, however, this new work is commenced the ground on which it is to be built must be thoroughly examined, and if necessary inspection shafts should be dug for this purpose; for the neglect to examine the ground may have been the original cause of the failure. After it has been proved satisfactorily that the ground is fit to be built upon, a good bed of Portland cement concrete should be carefully laid in a trench cut to receive it. It should not be allowed to be thrown in from the ground level as is so often done, for in that case all the larger stones fall first; but it should be let down in buckets and quietly deposited, and, after it has been well rammed, the cement on the top should be flushed off to a level surface. If brickwork is to be built upon this concrete, slabs of York stone are often laid over it to receive the footings. A good workman will measure the distance from the surface of this stone to the under side of the wall above, and will so arrange his courses that they will fit into the space exactly, allowing for the breadth of the joints; but if, when the work has been carried up, it is found that the last course does not quite reach to the under side of the whole work, a carefully laid course of pavement tiles or slates must be pinned into the space, and well grouted with liquid cement. The whole of the new work throughout must be built in cement; for cement possesses the quality, invaluable in this case, of expanding as it sets, and consequently it causes the whole of the new work to rise slightly and press against the under side of the old work.\*

\* (I have allowed this remark of the author's to stand, as it expresses an opinion shared by not a few experienced architects and builders. Portland cement, when "hot," expands in setting as we know, but when "cold" and



When this new pier, as we may call it, has been finished, and the cement has set hard, similar spaces may be cleared away and new work built and bonded into it on either side; and so we can proceed until the whole of the old foundations have been removed and replaced by new work, which will carry the superstructure with perfect safety for all time to come.

We have stated above that in all underpinning operations the new work throughout should be built in cement; this is certainly correct for all brickwork or masonry, but an exception may be made to this rule as far as concrete is concerned. All concretes, whether lime or cement, will expand when they set, The ordinary lime concrete used in and about London, composed of six parts of ballast to one part of greystone lime, will expand as much as three-eighths of an inch to every foot in height, and the size thus gained the concrete never loses. Consequently, if the underpinning is all under the ground, lime concrete, which is infinitely cheaper than brickwork or masonry in cement, may be the sole material employed; but, and this is important, some artificial means must be employed to force it up against the under side of the old work.

A very successful example of underpinning in lime concrete only, is thus described by Lieut.-Colonel Sir William Denison, R.E., in Mr. Burnell's work on "Limes, Cements, and Mortars":—

"One of the large storehouses in Chatham Dockyard having for some time exhibited serious defects in its walls, the attention of the Admiralty was directed to it in the year 1834, and Mr. Taylor, the Civil Engineer and Architect, was directed to report on the best mode of obviating the evil.

"Upon investigation, the foundation of the storehouse (a

"dead" it shrinks. When sufficiently but not excessively air-slaked it neither expands nor shrinks, and it is in this condition that it is safest to use cement for work in underpinning. It requires very great judgment to use expansive cement, for the expansion may readily be greater than is desirable, and instances have been known of walls being raised some inches in this manner. Cement which is "dead" must obviously be carefully avoided.—F. R. F.)

building 540 feet in length and 50 feet in breadth) was found to be in a very bad state ; the front wall, nearest the river, had originally been built upon piles, while the rear wall was laid upon an upper stratum of 5 or 6-inch planking, supported by two rows of transverse and longitudinal oak sleepers lying on the surface of the ground, which in this case was of a variable consistence, containing flints bedded in a sort of clay, quite pervious to the water, which at high tide rose some height upon the foundation. The sleepers and heads of the piles at the front of the building, thus exposed to alternate moisture and dryness, were in a state of rapid decay : in some places they were even reduced to a powder, and it was possible for a man to move under the walls in the space previously occupied by the timber. In the rear, the case was pretty much the same ; the sleepers were universally in a state of decay, but in some places were much further advanced towards decomposition than in others.

“ The state of the storehouse requiring immediate attention, it was resolved to attempt to underpin the walls. This the patentee for the new description of concrete, or artificial stone, undertook to do, having adopted a plan proposed by Mr. Taylor, for forcing the soft concrete against the under part of the wall ; and he proceeded to execute this contract in the following manner.


“ I must premise that the storehouse was vaulted underneath, and that the piers, or cross walls, required as much underpinning as any other part of the building.

“ The walls were laid open to their bottom, both inside and outside the building ; in the front, the heads of the piles and the sleepers were removed for a depth of about 4 feet below the bottom of the wall, and for lengths of about 5 feet at one time. In the rear, all the planks and sleepers were removed for the same distance. A mass of concrete, composed of one-eighth of Halling lime (reduced to a powder by grinding, and in a perfectly caustic state) and seven-eighths of Thames ballast, mixed up with so much boiling water as to reduce the whole to

a pasty consistence, was then thrown from a height of about 15 feet underneath the wall ; it was allowed to project about a foot on each side, where it was confined by planks, and after being roughly levelled, it was well rammed, to give it as much consistence as possible. This mass was raised about 3 feet, or to within 1 foot of the bottom of the wall : it was then carefully levelled, and covered with  $\frac{1}{2}$ -inch slates. A kind of framework was then placed on the slates, consisting of two cross-plates of iron, placed perpendicularly to the direction of the wall, about 1 foot wide, and long enough to project about 1 foot on each side of the wall.

"To these were fixed two frames parallel to the wall, about 4 feet long, each carrying two sockets for screws. Within these frames were placed two movable planks, long enough to pass just free between the cross-plates, and wide enough to fit nearly the space between the slates and the bottom of the wall. Upon these planks were sockets for the heads of the two screws, by which the planks were pushed forward or withdrawn at pleasure.

"When the apparatus was fixed, and the movable planks ready on both sides of the wall, about two barrowfuls of concrete, mixed as stated, were thrown in from above ; the workmen below then commenced turning the screws on each side simultaneously, moving the two planks towards the centre of the wall, and forcing the concrete before them into all the vacant spaces, and against the bottom of the wall. When the plank was forced forward as far as it would go, by the strength of two men to each screw, the concrete was allowed to rest for about five or ten minutes, by which time it had set hard enough to stand by itself, and its expansion in the act of setting completed what the pressure of the screws might have left undone. The planks were then withdrawn, another charge thrown in on each side, and compressed as before, and this was continued till the whole space between the frames was filled with concrete. The screws were then removed, the boards and frames unbolted and taken out, and lastly, the side-plates were withdrawn,

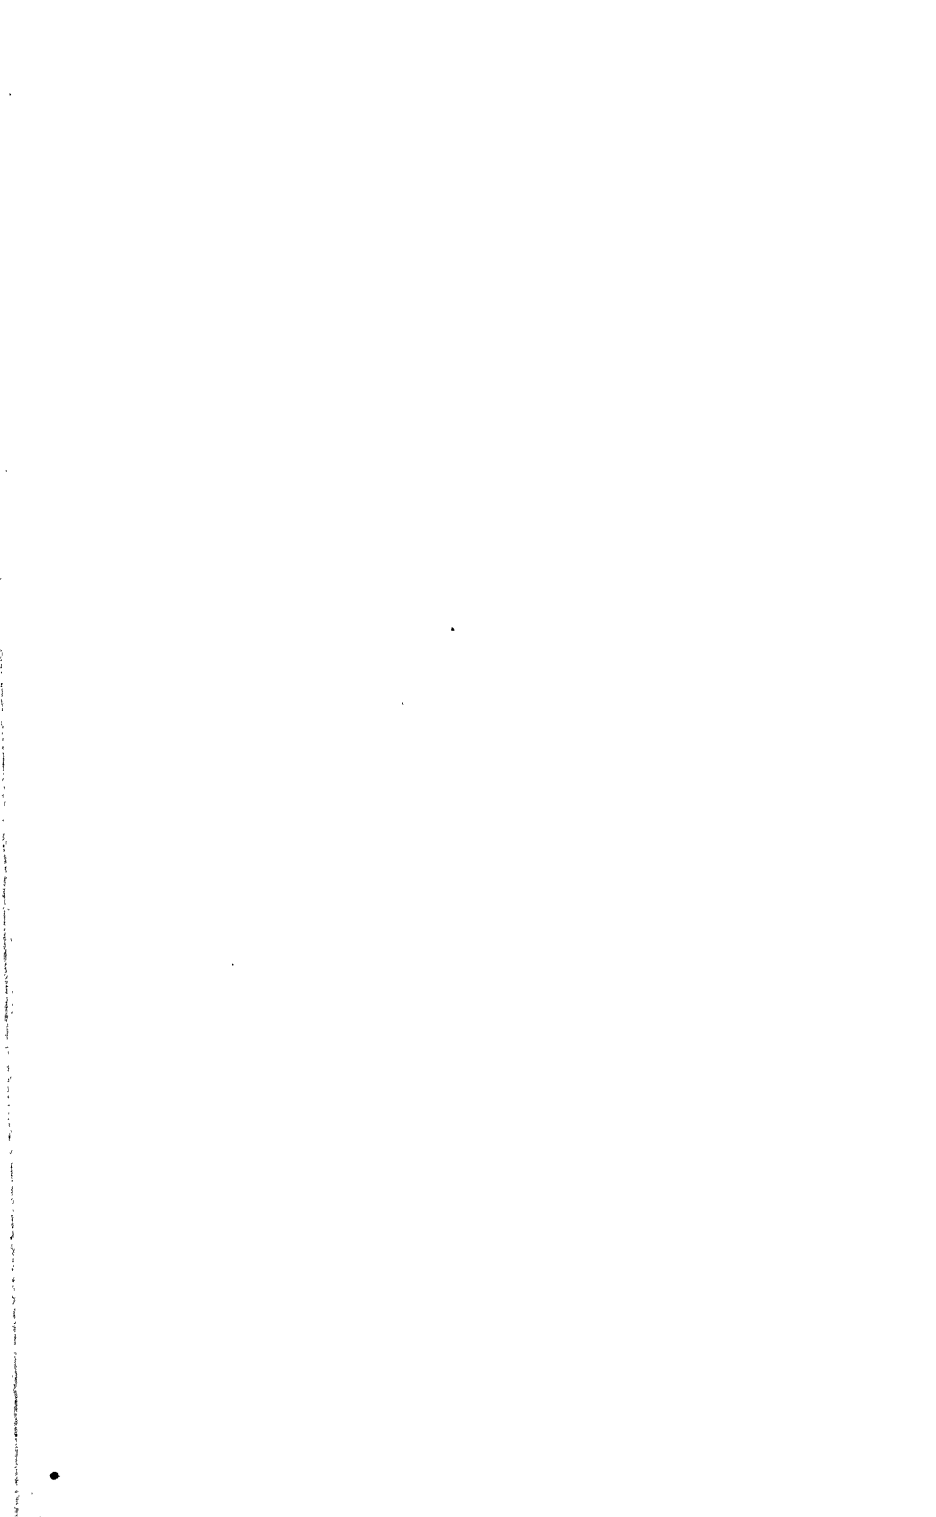

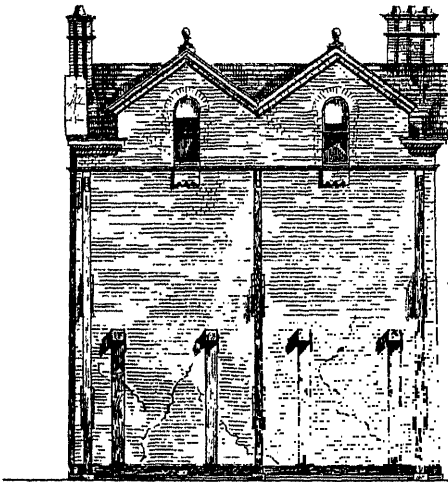


Fig. 1. Elevation.

Scale of  $\frac{10}{10}$  5 0 10 Feet.

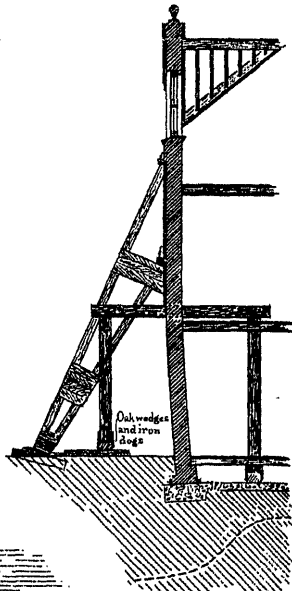


Fig. 2. Section.

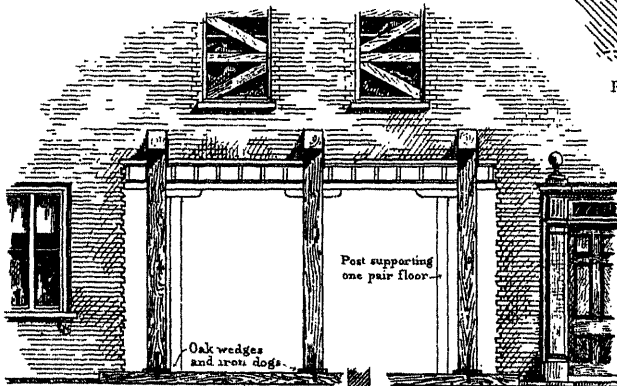


Fig. 3.

Elevation.

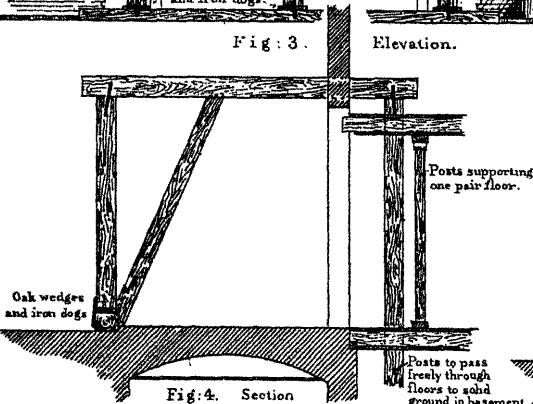


Fig. 4. Section

Scale of  $\frac{10}{10}$  5 0 10 Feet.

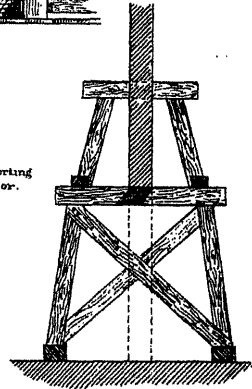


Fig. 5.

C. Haden Stock Inv. & Del.

leaving an interval of about  $\frac{3}{4}$  of an inch between each mass of concrete, which space was afterwards filled in with grout.

"The above description is given from notes taken at the time. The proportion of lime to gravel is as 1 to 6; and such is the efficiency of the concrete in the mode in which it was applied, that no settlement has taken place since the work was completed."

The majority of underpinning operations are carried out by some such methods as these that have now been described; but this way of dealing with a ruinous structure may be considered rather in the light of a prevention than a cure, for unless a building is thus treated at once when its foundations first show signs of giving way, the evil will gradually increase, and render it imperative not only that the foundations should be renewed, but also that a considerable portion of the wall above the ground should be taken down and rebuilt.

If we look, for instance, at the wall of the house depicted on Plate VI. Figs. 1 and 2, we shall see that it is ruined for several feet above the foundations. This might, perhaps, have been prevented if it had been underpinned at once, when the failure first showed itself; but no such steps having been taken, it has cracked badly in many places, bulged forward, and dragged the return walls out of the perpendicular.

The reason why the foundations have so signally failed in this case to carry the superstructure, is because the house has been made to encroach upon the site of an old pit or trench, shown by the dotted line in the section, Fig. 2, which has been filled up for many years, so that its existence has perhaps never been suspected: and as the foundations do not go down to any great depth, it is quite possible that it may not have been noticed when the wall was built, or the contractor may have chosen rather to risk a settlement than go to the extra expense of excavating the made ground and building up from the virgin soil.

It is now too late to underpin this wall in the ordinary way that we have just described, for the evil has spread so far that

it would still be unsafe, even though its foundations were renewed; but after it has been well shored up with raking shores, the method of needle shoring must be employed to support the upper portion (which, though it has been squeezed in a little towards the centre, is otherwise comparatively sound and homogeneous), and the whole of the lower portion of the wall for a distance of about 12 feet from the ground must be removed entirely. Accordingly four needles, which it is best to make whole timbers, i. e. about 13 inches by 13 inches, are inserted through holes cut in the wall well out of reach of the cracks, and above the point where the bulge is most pronounced, and these are supported by eight posts of the same scantling. In consequence of the peculiar nature of the case, the posts must be placed upon two continuous sole-pieces, laid on either side of the wall, and stretching well across the treacherous ground. On the exterior of the wall, the sole-piece must rest upon a carefully laid platform of stout planks, laid in such a way that the bearing of the two central posts may be spread over so much of the surface that it will be impossible for them to sink when the weight comes upon them. On the inside, the sole-piece may rest upon the concrete under the floor, if it is in a good condition; but if not, it must rest upon a similar platform of timber to that on the outside of the building. Great care must be taken in arranging these platforms that there may be no possibility of their being disturbed when the ground is excavated for the new foundations.

It will be noticed in the section, Fig. 2, that the needles pass through the wall just above one of the floors. This is the best and most usual position for the needles to occupy; for the brickwork at this point, and for some way above it, is perfectly sound, and has not been cut into for the insertion of plates and joists. This floor must, of course, be strutted up independently of the wall, and a hole cut through it and the ground floor to allow the posts which carry the needles to pass freely to the ground. If, however, this cutting through of the floors would be a very costly and troublesome business, platforms of timber

may be placed upon the floor and on the under side of the ceiling, spreading the weight over as many joists as possible, and the posts set up in different pieces.

The needles having been wedged up tightly against the under side of the old work, the whole of the brickwork below the needles must be taken down, the made ground under the wall dug out, and a good trench cut in the virgin soil to receive the bed of new concrete. The rest of the work may then be built up again in cement to meet the wall above, in the same way as has been described already.

It should always be borne in mind, that even after this new work has been finished and the cement has set, it is still the needles and posts which do the real work of carrying the wall; and the greatest care must be exercised in removing them, that the weight is transferred gradually, and not all at once, upon the new work. The needles should first be eased a little by knocking out the wedges at the foot of the posts a few inches, and then, after a day or two has elapsed, the wedges may be withdrawn entirely and the needles taken out; but the raking shores should remain in position for about a week after the wall has settled down upon its new bearings.

With regard to the responsibilities incurred in case of the failure of underpinning operations, Mr. Edwin Nash, in his paper on "Failures in Construction,"\* makes the following remarks :—" When we see that accidents under this head may cause verdicts of manslaughter to be recorded against architects, as was the case against Mr. Abraham, after the noted fall of a house in the Strand in 1853, we must be awakened to the necessity of so arranging the business part of such operations that the architect shall not be made responsible for details he cannot control. It is often a sort of work that requires intelligent watching during every moment of its progress, and this is not the architect's business; and if this view be not recognised

\* "Transactions R.I.B.A.," vol. xiv.



by courts of law, it behoves us to define the responsibility in a written document between architect and builder before commencing the work."

It is not, however, in connection with ruinous structures that we must look for the most general use of needle shoring, for walls are, as a rule, underpinned at once, without its aid, when the foundations first show signs of giving way; but it is much more commonly employed in cases where some alteration is to be made in a building which is perfectly sound—such, for instance, as the addition of a new basement, or the insertion of a shop-front. As an example of the former case, the Gaiety Restaurant in the Strand may be cited. It was necessary, in order to obtain the space afterwards occupied by the magnificent Grill Room, that the walls should be taken down to a greater depth than was previously the case; accordingly needle shoring was employed, and the whole building stood for many weeks as it were upon crutches, while the new foundations were being built. In consequence of the weight of the walls, and to obviate some difficulty in supporting the floors, the needles were doubled, i.e. placed one above another in the manner shown in the sketch, Plate VI. Fig. 5.

An example where needle shoring is required to support a wall during the insertion of a breastsummer and shop-front is illustrated in Plate VI. Figs. 3 and 4. The needles in this case must be made longer than usual to span the vaults under the pavement; consequently it will be as well to strut them as shown in the section, Fig. 4. Raking shores need not be used unless the wall is of a great height, or in a bad condition; but the window openings immediately above the needles, must in any case be well strutted, as shown in the elevation, Fig. 3, or they will be squeezed in, and the frames, as well as the glass, will be broken.

When the opening has been made in the wall, and substantial piers have been built at either end of it, the girder or breastsummer is fixed in position, and a plate fitted to its lower flange to take the joists of the first floor. A 3-inch York stone template

is then bedded on the top of the girder, and a course or two of brickwork built up in cement to meet the under side of the old work.

It will now be unnecessary to give any further illustrated examples of this simple method of needle shoring : but before we go on to consider its use in cases of a more complicated character in the next chapter, there are one or two further points to which it may be as well to draw the reader's attention.

If it should be required, for instance, to clear away the lower portion of a party-wall, so as to throw the premises on the ground floor into one large shop or office, before the needles, which will carry the wall during this operation, are inserted, the following points should be considered :—

1st. If there are any chimney breasts in the wall, they should be well supported ; two or even three needles, if the width of the breast is considerable, should be inserted under them, with as good a bearing as possible.

2nd. If there are any piers or corbels in the wall, a needle should be inserted under each.

3rd. If the upper floors are double, or framed floors, the needles should be inserted in the same perpendicular plane with the binding joists or girders.

4th. Care should be taken in arranging the position of the posts which are to carry the needles, that they shall not interfere with the proper adjustment of the girders and stanchions which are eventually to carry the wall.

The needles must be inserted above the first floor for the reasons mentioned above, and also to allow of the girders being fixed on a level with this floor. In the case of a warehouse, if the structure is in a bad condition, it will be as well to remove all goods which are stored upon the floors above the needles, or at all events to shift them, so that their weight is carried by the story posts or by another wall. But if this could not be done except at great inconvenience to the proprietors, the floors must be strutted up from the

ground, and so made altogether independent of the support of the party-wall.

In the example we have given above of the underpinning of the storehouses at Chatham, it was not deemed necessary to move the goods at all during the operations, though they were very heavy, comprising all sorts of ships' tackling, such as cables, blocks, ropes, spars, &c. ; but it will be recollected that in that case the walls were not needled, and only underpinned in short lengths at a time. However, all such considerations as these depend upon so many things, that they can only be left to the judgment of the architect in each particular case.

At the commencement of this chapter it was laid down as a general rule that whole timbers should be used in cases of needle shoring, and for this reason, that although the scantling of whole timber may be found by the usual formula to be larger than that required to carry the weight with safety, yet it should be borne in mind that all beams of timber will deflect a little when a weight comes upon them, and it is important in the case of a needle that this deflection should be reduced to a minimum. Again, there is always the possibility of there being some unforeseen defect in the timber, and the greatest care should be taken, even when a needle is made of whole timber, that it is perfectly sound throughout: the same may also be said of the posts which carry the needles. If, however, economy or space should require that smaller timbers should be used, we must employ the following formulæ, from "Tredgold's Carpentry," for the scantling of beams supported at both ends and loaded in the centre, and posts compressed in the direction of their axis:—

To find the scantling for a rectangular piece of timber that will sustain a given weight in the centre, when supported at the ends in a horizontal position.

When the breadth is known or settled,

$$D = \sqrt[3]{\left(\frac{L^2 \times W \times a}{B}\right)};$$

When the depth is known or settled,

$$B = \frac{L^2 \times W \times a}{D^3};$$

where L=length of bearing in feet;

W=weight to be carried in pounds;

a=.01 for fir, and .013 for oak;

B=breadth in inches; and

D=depth in inches;

To find the scantling of a rectangular post capable of sustaining a given pressure in the direction of its length:

$$D = \sqrt[3]{\left(\frac{L^2 \times W \times a}{B}\right)};$$

where L=length in feet;

W=the weight to be sustained in pounds;

a=0.00133 for fir, and 0.0015 for oak;

B=breadth in inches; and

D=thickness required in inches.

*Part IX. of the London Building Act, 1894 (57 & 58 Vict. c. 213), relating to Dangerous and Neglected Structures.*

#### *Dangerous Structures.*

Sect. CII. In this part of this Act the expression "structure" includes any building, wall, or other structure, and anything affixed to or projecting from any building, wall, or other structure.

Meaning of structure.

Sect. CIII.—(1) Where it is made known to the Council that any structure is in a dangerous state the Council shall require a survey of such structure to be made by the district surveyor or by some other competent surveyor.

Survey to be made of dangerous structures.

(2) For the purposes of this part of this Act the expression "district surveyor" shall be deemed to include any surveyor so appointed.

(3) The district surveyor shall make known to the Council

any information which he may receive with respect to any structure being in a dangerous state.

(4) It shall be lawful for the district surveyor to enter into any structure or upon any land upon which any structure is situate for the purpose of making a survey of such structure.

Effect of  
this part of  
Act within  
the City.

Sect. CIV. In cases where any such structure is situate within the city this part of this Act relating to dangerous structures shall be read as if the Commissioners of Sewers were named therein instead of the Council, and all costs and expenses of and all payments hereby directed to be made by or to such Commissioners shall be made by or to the Chamberlain of the City out of or to the consolidated rate made by such Commissioners in the same manner as payments are made by or to such Chamberlain in the ordinary course of his business.

Surveyor  
to give  
certificate.

Sect. CV. Upon the completion of his survey the district surveyor employed shall certify to the Council his opinion as to the state of the structure.

Notice to  
be given to  
owner in  
respect of  
certificate.

Sect. CVI. If the certificate is to the effect that the structure is not in a dangerous state no further proceedings shall be had in respect thereof, but if it is to the effect that the same is in a dangerous state the Council may cause the same to be shored up or otherwise secured, and a proper hoard or fence to be put up for the protection of passengers, and shall cause notice to be served on the owner or occupier of the structure requiring him forthwith to take down, secure, or repair the same as the case requires.

Proceed-  
ings to  
enforce  
compliance  
with  
notice.

Sect. CVII.—(1) If the owner or occupier on whom the notice is served fail to comply as speedily as the nature of the case permits with the notice, a petty sessional court on complaint by the Council may order the owner to take down, repair, or otherwise secure to the satisfaction of the district surveyor the structure or such part thereof as appears to the court to be in a dangerous state within a time to be fixed by the order, and if the same be not taken down, repaired, or otherwise secured within the time so limited, the Council may with all convenient speed cause all, or so much of the structure as is in a dangerous

condition to be taken down, repaired, or otherwise secured in such manner as may be requisite. Provided that if the owner of the structure dispute the necessity of any of the requisitions comprised in the notice, he may by notice in writing to the Council within seven days from the service of the notice upon himself, require that the subject shall be referred to arbitration.

(2) In case the owner require arbitration, he may at the time of giving such notice appoint an independent surveyor to report on the condition of the structure in conjunction with the district surveyor within seven days of the receipt by the Council of the notice of appointment of the owner's surveyor, and all questions of fact or matters in dispute which cannot be agreed between the owner's surveyor and the district surveyor shall be referred for final decision to a third surveyor, who shall (before the owner's surveyor and the district surveyor enter upon the discussion of the question in dispute) have been appointed to act as arbitrator by such two surveyors, or in the event of their disagreeing by a petty sessional court on the application of either of them. Such arbitrator shall make his award within fourteen days.

(3) The notice served by the Council shall be discharged, amended, or confirmed, in accordance with the decision of the two surveyors or the arbitrator as the case may be.

(4) Unless the arbitrator otherwise direct the costs of and incident to the determination by the two surveyors or the arbitrator of the question in dispute shall be borne and paid in the event of such determination being adverse to the contention of the district surveyor by the Council, or in the event of such determination being adverse to the contention of the owner's surveyor by the owner.

Sect. CVIII. Notwithstanding any such notice requiring arbitration as aforesaid a petty sessional court, on complaint by the Council, may, if of opinion that the structure is in such a dangerous condition as to require immediate treatment, make any order which such court may think fit with respect to the taking down, repairing, or otherwise securing the structure.

Court may  
make order  
notwith-  
standing  
arbitra-  
tion.

**Expenses.** Sect. CIX.—(1) All expenses incurred by the Council in relation to the obtaining of any order as to a dangerous structure, and carrying the same into effect under this part of this Act, shall be paid by the owner of the structure, but without prejudice to his right to recover the same from any person liable to the expenses of repairs.

(2) If the owner cannot be found, or if on demand he refuse or neglect to pay the said expenses, the Council after serving on him three months' notice of their intention to do so may, if in their discretion they think fit, sell the structure, but they shall, after deducting from the proceeds of the sale the amount of all expenses incurred by them, pay the surplus (if any) to the owner on demand.

**Provisions  
respecting  
sale of  
dangerous  
structures.**

Sect. CX. Where under this part of this Act any dangerous structure is sold for payment of the expenses incurred in respect thereof by the Council, the purchaser, his agents and servants may enter upon the land whereon the structure is standing for the purpose of taking down the same and of removing the materials of which it is constructed.

**If proceeds  
insuffi-  
cient, land  
not to be  
built on  
till balance  
paid.**

Sect. CXI. Where the proceeds of the sale of any such structure are insufficient to repay to the Council the amount of the expenses incurred by them in respect of such structure, no part of the land whereon the structure stands or stood shall be built upon until after the balance due to the Council in respect of the structure has been paid.

**Recovery of  
expenses.**

Sect. CXII. If the materials are not sold by the Council, or if the proceeds of the sale are insufficient to defray the said expenses, the Council may recover the expenses or the balance thereof from the owner of the building, together with all costs in respect thereof in a summary manner.

**Fees to  
surveyor.**

Sect. CXIII.—(1) There shall be paid to the district surveyor in respect of his services under this part of this Act in relation to any dangerous structures the fees specified in Part II. of the Third Schedule to this Act.

(2) Provided that if any special service is required to be performed by the district surveyor under this part of this Act

for which no fee is specified in the said schedule, the Council may order such fee to be paid for that service as they think fit.

(3) All fees paid to any surveyor by virtue of this section shall be deemed to be expenses incurred by the Council in the matter of the dangerous structure in respect of which such fees are paid, and shall be recoverable by them from the owner accordingly.

Sect. CXIV. Where a structure has been certified by a district surveyor to be dangerous to its inmates, a petty sessional court may, if satisfied of the correctness of the certificate, upon the application of the Council, by order direct that any inmates of such structure be removed therefrom by a constable or other peace officer, and if they have no other abode he may require that they be received into the workhouse for the place in which the structure is situate.

Power to  
remove  
inmates  
from  
dangerous  
structure.

### *Neglected Structures.*

Sect. CXV.—(1) Where a structure is ruinous or so far dilapidated as thereby to have become and to be unfit for use or occupation, or is from neglect or otherwise in a structural condition prejudicial to the property in or the inhabitants of the neighbourhood, a petty sessional court on complaint by the Council may order the owner to take down or repair or rebuild such structure (in this Act referred to as a neglected structure) or any part thereof, or to fence in the ground upon which it stands or any part thereof, or otherwise to put the same or any part thereof into a state of repair and good condition to the satisfaction of the Council within a reasonable time to be fixed by the order, and may also make an order for the costs incurred up to the time of the hearing.

Removal of  
dilapidated  
and neg-  
lected  
buildings.

(2) If the order is not obeyed the Council may, with all convenient speed, enter upon the neglected structure of such ground as aforesaid and execute the order.

(3) Where the order directs the taking down of a neglected structure or any part thereof, the Council in executing the order



may remove the materials to a convenient place, and (unless the expenses of the Council under this section in relation to such structure are paid to them within fourteen days after such removal) sell the same if and as they, in their discretion, think fit.

(4) All expenses incurred by the Council under this section in relation to a neglected structure may be deducted by the Council out of the proceeds of the sale, and the surplus (if any) shall be paid by the Council on demand to the owner of the structure, and if such neglected structure or some part thereof is not taken down and such materials are not sold by the Council, or if the proceeds of the sale are insufficient to defray the said expenses the Council may recover such expenses or such insufficiency from the owner of the structure together with all costs in respect thereof in a summary manner, but without prejudice to his right to recover the same from any lessee or other person liable to the expenses of repairs.

*Supplemental as to Dangerous and Neglected Structures.*

Provision  
for en-  
forcing  
repayment  
of expenses  
incurred by  
Council.

Sect. CXVI.—(1) Where the Council have incurred any expenses in respect of any dangerous or neglected structure, and have not been paid or have not recovered the same, a petty sessional court on complaint by the Council may make an order fixing the amount of such expenses and the costs of the proceedings before such petty sessional court, and directing that no part of the land upon which such dangerous or neglected structure stands, or stood, shall be built upon, or that no part of such dangerous or neglected structure, if repaired or rebuilt, shall be let for occupation until after payment to the Council of the said amount, and thereupon and until payment to the Council of the said amount no part of such land shall be built upon, and no part of such dangerous or neglected structure so repaired or rebuilt shall be let for occupation.

(2) Every such order shall be made in duplicate, and one copy of such order shall be retained by the proper officer of the court and the other copy shall be kept at the county hall.

(3) The Council shall keep at the county hall a register of all orders made under this section, and shall keep the same open for inspection by all persons at all reasonable times, and any such order not entered in such register within ten days after the making thereof shall cease to be of any force. No property shall be affected by any such order unless and until such order is entered in such register.

Sect. CXVII.—The fees specified in Part IV. of the Third Schedule to this Act as payable to the Council, shall be payable to and may be recovered in a summary way by the Council.

Fees on  
dangerous  
or neg-  
lected  
structures  
to Council.

## CHAPTER VI.

### ON THE SHORING AND UNDERPINNING OF MEDIÆVAL BUILDINGS.

THE practice of the art of shoring and underpinning does not always confine itself to the meaner buildings in a crowded town, but the sphere of its greatest usefulness and fullest development is to be found in the restoration of our venerable churches and cathedrals, many of which, but for its timely aid, would long before this have fallen victims to the ravages of decay. Every architect who loves his art must be glad to be the means of saving from destruction even one stone of those wonderful and beautiful works executed by the masons of the Middle Ages: and there have been many instances in which the ponderous towers and steeples of cathedrals have been saved from impending ruin by an opportune application of this useful science. Such were the works of Rondelet at the Church of St. Geneviève at Paris, of Flachat at the cathedral at Bayeux, and in our own country, of Cottingham at Hereford; and had it not been for the interference of the elements, the underpinning at Chichester would no doubt have been successfully carried out, and the original tower and spire of the cathedral might still have been standing.

The gigantic shores and centres used in cases such as these require, however, a fuller description than can be given in this treatise; and the reader is referred for an example to the excellent description and drawings of the shoring of the central tower and lantern of the cathedral at Bayeux by MM. Dion and Lasvignes. But instances of shoring on so vast a scale are rare, and more the work of engineers than architects; and it will be better to describe here a more humble example,

and one which is more likely to be of service to us in ordinary practice.

At a meeting of the Royal Institute of British Architects, held on Monday, 3rd February, 1873, an excellent paper was read by Mr. J. P. Seddon, F.R.I.B.A., on the shoring, &c., of the tower and spire of the parish church of Grosmont in Monmouthshire. We cannot do better than quote here Mr. Seddon's own remarks upon that building, describing the state of decay in which he found it, and the subsequent measures which were employed in its restoration. The diagrams on Plates VII. and VIII. are copied from the drawings made by Mr. William Ed. Martin to illustrate Mr. Seddon's paper, and which afterwards appeared in the *Building News* of February 7th, 1873.

"The parish church of Grosmont, dedicated to St. Nicholas, in the diocese of Llandaff, is situated in Monmouthshire, near to where the border of that county joins those of Herefordshire and Breconshire—a very beautiful and retired part of the country.

"The structure is one which by its historical interest and architectural value justifies the pride taken in it by the inhabitants of the surrounding district; but it has even wider claims for consideration, and particularly in connection with this metropolis, distant though it may seem to be.

"It owes, if not its origin, at least its enlargement and embellishment, to the same munificent patronage which directed those on a grander scale at the Abbey of Westminster; and though Grosmont Church is, as befits its position, a comparatively humble structure in point of style, it may claim some resemblance to its nobler contemporary. Had the same caution been exercised in its case as in that of the Abbey, and had only a modest lantern surmounted its crux, I should not have the following chronicle of disaster to bring before you. But the substructure was in all probability never intended to support the ambitious though elegant central octagon tower and spire which at a later period were piled upon it, exemplifying a

temerity of which mediæval architects were often guilty, and which brought ruin in the case of Chichester and serious danger in that of Salisbury.

"The church, the plan of which is a Latin cross, consists of a nave 67 feet by 18 feet 6 inches, and aisles 9 feet 6 inches wide, separated by arcades of five bays (with responds deeper than ordinary, obviously to give more abutment to the crux arches); central tower and spire; transepts with aisles on the western sides of the same width as those to nave; chancel and chapel south of same. There is also a porch on the north side opposite the central bay of the main arcades. The crux arches and transept are the earliest portion, being in the style of the Transition between Norman and Lancet. The chancel is fully developed Lancet.

"It is now many years since I was first called in to examine this church, and then it was in a condition which cannot be described as other than tottering from old age. In this part of the country it must always have been a difficulty to obtain proper building sand, and the loamy sand at hand would soon destroy the value of any amount of lime mixed with it. From this cause the mortar of the walling throughout had become little better than earth, and the whole of the external walls exposed to the weather were grievously dilapidated.

"Under the great weight of the tower and spire which were added, the earlier crux, piers, and arches have been crushed and twisted out of shape, and this pressure has been transmitted in the directions of north, south, and west, by the several arches, which had themselves become distorted so as actually to thrust outwards the end walls of nave and transepts. The more solid walls of the eastern side of transepts and of the chancel had yielded less, yet still in some degree.

"The whole eastern limb, viz. chancel and Eleanor Chapel, by far the richest architecturally, was in the worse condition, and imperatively needed rebuilding. Under the circumstances, described, however, it seemed a perilous operation to undertake, as even the temporary removal of such support as they gave the

central tower might accelerate the ruin of the rest of the fabric. Funds adequate for this work only having with difficulty been collected, this was effected with great care. The chancel and Eleanor Chapel were in 1869-70 almost entirely taken down and rebuilt under my directions.

"Careful examination was made, before and after the execution of this work, of the state of the crux, piers, and arches, and marks set to show whether these yielded at all by reason of settlement in the new masonry. This, which was mostly to be feared at the north-east angle pier, does not seem to have taken place to any great extent. But still I received reports from time to time that the original mischief was proceeding, and I caused a close examination to be made, from which it appeared that the cracks were surely though slowly extending, particularly in the north-west pier. In consequence of this, I reported that it was, in my opinion, essentially necessary that the tower and spire should be so shored up and supported by centres as to be independent of the piers, which then, as funds were procured, could be made good; after which the restoration of the arches and superstructure could at any time be taken in hand.

"I estimated the cost of this preliminary work of supporting the failing arches at about 400*l.*, and received instructions from the vicar, the Rev. W. H. Twyning, to direct it to be done at once.

"The failure of the substructure of the tower is primarily traceable to two causes. First, errors in design; and, secondly, errors in construction. The design is in fault from the weight of the tower being carried upon insufficiently abutted arches; and the construction, from the imperfect execution of the dressed stone-work and the masonry of the walling.

"From the first cause (*imperfect design*) four distinct *classes* of failure are to be traced:—(1) Spreading of arches at their springing; (2) flattening of the arch curves, thus neutralising the keying, and rendering the arch insecure by the liability of voussoirs to fall out; (3) *thrusting of the vertical supporting piers under the tower arches out of the perpendicular*; and

(4) transmission of the thrusting force to all adjoining piers, arches, and walls, throwing them out of the normal stable condition—verticality.

“From the second cause (imperfect construction) three classes of failure may be traced:—(1) The crushing of the wrought stone facings which form the casing of the piers; (2) the bursting asunder or drawing of the bonders of the various members of which the piers are composed; and (3) rents or fissures of the walling generally.

“The most prolific causes of failure in building are generally two, viz. unequally yielding of foundation trenches, and uncompensated thrusts, whether from roofs or arches. The case now under consideration is a signal example of failure from the latter cause—an *equally unyielding* foundation having contributed in some degree to intensify this failure.

“Writers of books on building generally assume it as a fact not to be questioned that a solid rock foundation, roughly levelled or stepped where necessary, is the foundation most to be desired; but an attentive consideration of the present case would lead to the belief that such a foundation, if not absolutely dangerous as a base for a building erected in the ordinary way, is at least very undesirable unless extraordinary precautions are used in the selection of the materials for the walls, in the bonding, and in the elimination of all unequal settlement from a greater number of mortar joints in any one portion of the walling than in another on the same level. In this case the functions of the tower piers were to transmit the weight of the tower to the foundations; the latter being rock and incompressible, the piers became crushed between two unyielding forces, which would not have been the case had the foundation been of a partially yielding nature, such as a stiff clay or gravel.

“Taking the various classes of failure enumerated in detail: (1) The spreading of the lower arches at the springing. The four arches carrying the tower spread as follows:—North arch, 584 feet (7 inches); east arch, 375 feet (4½ inches); south arch,

·75 feet (9 inches); west arch, ·625 feet ( $7\frac{1}{2}$  inches). This spreading has not taken place equally at both sides of the original central line of each arch; the abutments to some of the arches, being more solid and stable than others, remain almost in their original positions, whilst the spreading has taken place on that side of the centre line towards the weakest abutment.

"Spreading of the arches leads naturally to the second class of failure, viz. flattening of the arch curves. This flattening has not taken place regularly; the arches preserve in some parts their original curves, whilst in other places the curves have been forced into straight lines. The general outlines now assumed by the soffits of the arches are irregular lines not amenable to any known mathematical curve.

"Spreading of the arches also involves the third class of failure, viz. thrusting the piers supporting them out of the perpendicular. It is evident that the piers could not have remained upright when the arches spread, except on the supposition that the springers of the arches slipped back on the abaci of the caps; but this would have been impossible, for the vast weight of the superstructure augmented the friction between the two stone surfaces to such an extent as to make the last stone of the cap and first stone of the arch practically one stone. Hence the number of inches by which the faces of two opposite piers are out of plumb becomes a correct measure of the spread of the superincumbent arch.

"The fourth class of failure noticed is the transmission of the thrusts of the tower arches to the extremities of the building in all directions. It will be well to remember that those forces *commenced* and continued to act whilst the walling generally was *green* and the mortar in a soft condition, thus facilitating to some extent the accommodation of the surrounding abutments to the thrusting forces, without involving any sudden violent or dangerous fractures; while the gradual subsequent piling on weight when the tower and spire were added, continued to increase the distortion.



"The forces generated by the thrusting of the north and south tower arches are in the directions of the nave arcades to the westward and the chancel flank walls to the eastward; the latter, being comparatively solid walls—on account of the narrowness of the lancet window openings—have sustained the thrusts in a fairly efficient manner; but on account of the large openings and small piers in the nave arcades they formed but an indifferent abutment; hence every pier and arch is thrust westward, the west gable itself being thrust out of the perpendicular, overhanging its base  $5\frac{3}{4}$  inches. The east and west tower arches, acting through the transept flank walls which are their abutments, have thrust out of the perpendicular the north and south transept and walls—the former  $4\frac{3}{4}$  inches, and the latter  $8\frac{1}{2}$  inches.

"An inspection of the ground plan of the building will show the north-west and south-west piers to be those most deficient in abutment, and in reality it is found that these two piers are those that have suffered most, and are in the most dangerous condition. The south-west pier had to be cased some forty years since with carefully coursed wrought masonry, increasing the area of the pier by about 10 feet superficial; and the present extremely dangerous condition of the north-west pier compels its reconstruction before any other portion of the building.

"The first class of failure arising from the second cause is the crushing of the dressed stonework in the pier facings. This has taken place from the undue concentration of the weight on this facing; the backing being composed of rubble walling, with a greater number of mortar joints than in the facing, has settled down, leaving the casing to do the work of carrying the tower, and thus reducing the working area of each pier from 18 feet to 8.34 feet.

"The second class of failure under this head is the drawing of the bond stones or bursting asunder of the piers. This is a very unusual mode of failure; and is due in this case to imperfect footings under some members composing the piers.

The footings were crushed or squeezed away from this particular part of the foundations ; hence the bursting or drawing of the bonders or headers in the quoins immediately over this defective work.

“The last class of failure to be noted is that most commonly found in nearly every building, ancient or modern, viz. splitting of the walling in a direction at right angles or inclined to the beds, commonly called settlements.

“Settlements result from the non-elastic nature of the materials composing a wall ; no one part of the walling being free to sink, or settle down, or change its position, vertically or horizontally, without fracturing or splitting the stones, bricks, or mortar joints in a greater or less degree ; always in proportion to the depth of settlement. From the description already given of the movements of the arches and piers, with their abutments, it will be no matter of surprise to find the masonry of the walls generally, in contact with the tower, fractured, and thrust and crushed in every direction, horizontally as well as vertically. The entire subject affords an interesting and instructive example of the effect produced by a weight of 600 tons acting upon four pointed arches for a space of 500 years, and serves to demonstrate conclusively the necessity of neutralising thrusts effectively, whether such thrusts be created by the exigencies of style or design.

“The state of the tower, piers, and arches, was, as may be imagined, the subject of much talk in the village of Grosmont. The oldest inhabitant recollected the structure to have been in exactly the same state ever since he first saw it, and by some extraordinarily subtle process of reason deduced this valuable conclusion, viz. that as the tower had never fallen in his time, it was never going to fall. Almost every village in this part of the world contains at least *half-a-dozen* of such old inhabitants, whose inexorable logical deductions are supposed to silence most effectually the objections of any unfortunate professional man who happens to disagree with them.

“It having been decided in the autumn of the year 1869 to

restore the chancel of Grosmont Church, the opportunity of seeking to determine if the failure of the tower substructure was at all progressive was seized. With this object all the fissures in the stonework were filled with cement, and the extent of the fissures lineally determined by drawing lines across the end of them in transverse directions. The structure thus prepared was left, after the chancel had been rebuilt, up to the end of November, 1872 (about two years), when a careful inspection of the parts so prepared revealed the following startling facts: first, that all the fissures which had been sealed up with cement were open again; and, secondly, that the transverse terminal lines of the fissures of 1870 were left 2 inches or 3 inches, in some cases as much as 6 inches, behind by the extension of the fissures up to 1872. This discovery compelled immediate attention to the dangerous condition of the tower, and notwithstanding the renewed protests of the oldest inhabitants, I did not hesitate to recommend the taking of immediate steps to restore the four disabled tower piers and arches, and in the event of the necessary funds not being available to effect this restoration, at least to shore up three of the arches, thus relieving the piers, and to needle the fourth arch, leaving a clear space under it for its restoration should the funds obtainable be sufficient to cover the expense.

"An idea suggested itself that the piers and arches might be restored by taking out a damaged stone here and there, and replacing the stones so removed with other sound stones, thus effecting the restoration with comparative safety and by slow degrees; but on consideration this plan was abandoned, because some parts of the piers should of necessity be entirely recased or rebuilt, of course vertically. This would have the effect of reducing the width between the piers to something about 9 inches less than the width of the arch at the springing, which would be a reversal of the proper way of treating the arches, viz. by having them, as originally constructed, 2 inches narrower at the springing than the space between the piers supporting them. It was therefore decided that the piers and

arches should be entirely removed and rebuilt, using in all the old stone not damaged, and that this should be first tried upon the arch and piers on the north side, the arch proposed to be needed, this being in the most unsafe condition of the four.

"As in constructing an effective system of supports to the tower arches, a safe unyielding bottom was a primary consideration, it was determined in this case to clear away the entire space immediately under the tower, tower arches, and for a space of 3 feet all round outside or beyond the tower piers, right down to the solid rock, and to refill the space so cleared with carefully made cement concrete well rammed. The site to be thus operated upon was encumbered with old seats, fittings, and wood floors, all of which having been cleared away, the excavation commenced, *planked runs* having been laid down through the church and across the churchyard to pits or graves dug to receive the human remains disinterred; the soil itself being spread over the surface of the churchyard at some distance from the building.

"On removing the soil immediately under the floors it was found that the bodies had been at some time interred with not more than four inches of soil over the coffins, which accounted for a hitherto 'unaccountable smell' that had frequently sickened some members of the congregation during their attendance at Divine Service.

"Lower down, at about two feet under the floor level, five distinct springs made their appearance, evidently the drainage from the hill at the north side of the building. These springs flooded the space already excavated, preventing further progress. A drain six feet deep was cut through the south transept and discharged through the south transept wall into the churchyard, which is lower at that side. This drain kept the working from being submerged, and discharged during the heavy rains 60 gallons of water per minute.

"The excavations were continued until solid rock was reached at an average depth of five feet from the floor level. The entire


soil removed was of a very dark colour, light in weight and spongy in texture, containing human remains in various stages of decay ; in fact the whole mass had apparently been used over and over again for burials, the most recent having been apparently thirty-one years ago. This appeared from the coffin breastplate, which with its gilded lettering, was as fresh as the day it was put in, although there was no trace whatever of the coffin, which was stated to have been of oak by a party who recollected seeing it lowered into the grave.

"Some graves were hollowed out of the solid rock below the tower foundations, others with steined half brick sides, covered with stone slabs ; the latter were found to be filled with a black fluid, emitting a stench so horrible as to be perceived even in the most remote parts of the building. All human remains disturbed were reverently cared for and interred in the churchyard. The entire space dug out was now filled up with cement concrete well rammed ; 135 tons of concrete having been consumed in this operation. A drain was laid on the rock bottom under the concrete to drain the springs which continued to flow in from the north side of the building. A finer concrete was spread upon the surface between the piers under the tower arches, and upon this a bed of cement eighteen inches wide was floated off to a level to take the centerings.

"The shorings to each arch are constructed in two separate portions, the lower portion on 'tressel' and the upper portion on centre proper. This system has been adopted to facilitate 'wedging up' or 'striking' the centres when and where required. The exact outline of each arch was obtained by 'scribing' the soffit of the inner member of the arch to which the centre was to fit, on a skeleton template of  $\frac{3}{4}$ -inch boarding, sufficiently wide to include the whole curve of the arch, which template was securely fixed against the sides of the arch during the scribing. This template was shaped by the line so scribed, and the permanent framing worked to it ; thus the centres when fixed fitted accurately all the irregularities of the arches. The timber used in the shoring generally is from 10 inches to 12



PLATE, VII.

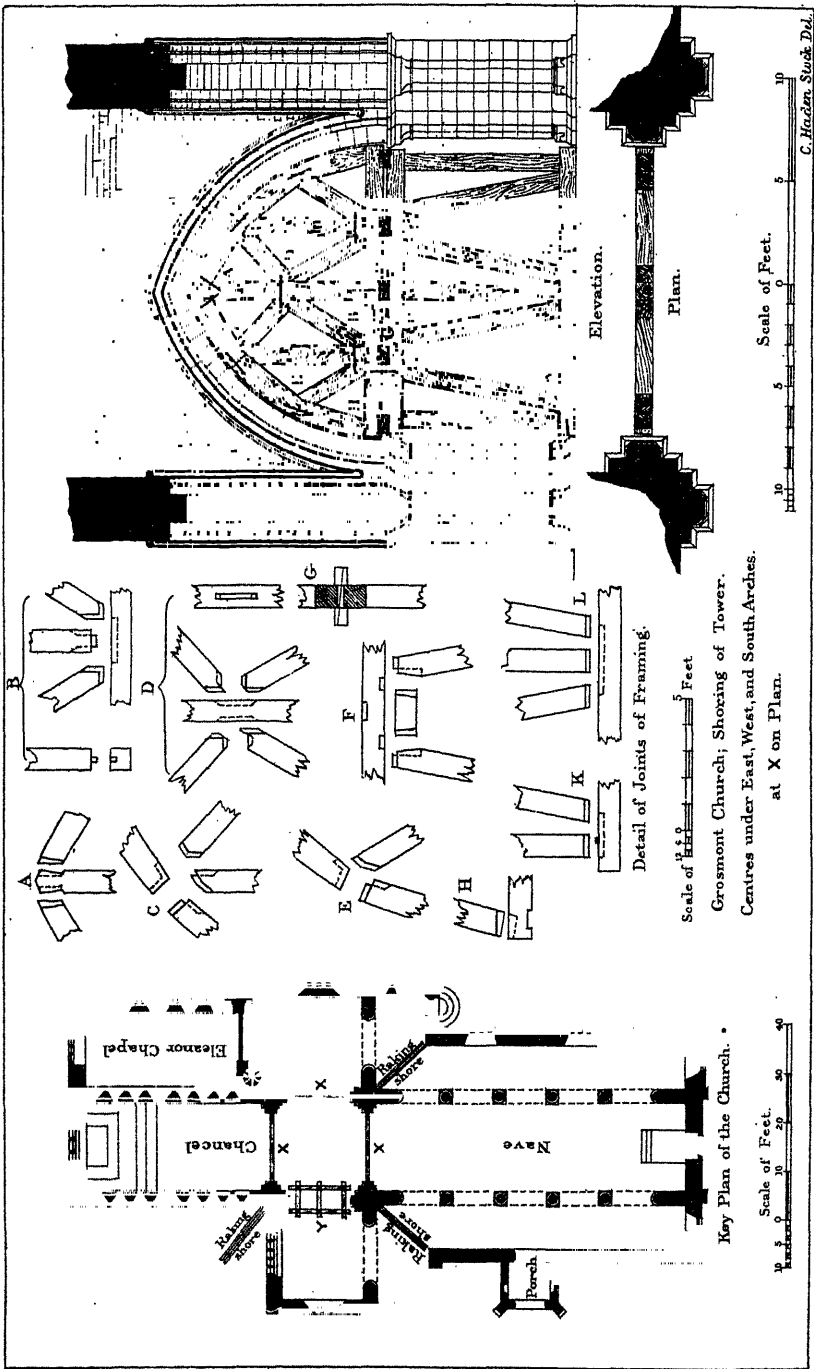

inches square, some having been selected 14 inches wide to allow of getting out the curved backs without reducing the working section of the timber below 10 inches by 10 inches.

"All the joints in the frames are tenoned (see Plate VII.), the tenons being 2 inches thick in the centre of each piece, and from  $2\frac{1}{2}$  inches to 3 inches deep; the joints are all shown on the drawings precisely as they were executed. The framework was fitted together on the nave floor first, and having been numbered at the joints was knocked to pieces to facilitate the removal and re-erection under the tower. Each tressel was afterwards built up in its proper place, and when the three tressels were securely fixed in their respective archways, a temporary scaffolding was erected on them to make a platform for the putting together and hoisting of the centres. The springing piece of each arch was laid down on its side in that arch, and the centre framed to it and secured together with  $\frac{3}{4}$ -inch wrought-iron dogs; a *tackle* was then rigged up to the bell beams with a *fall* to the floor, and each centre was thus hoisted to its proper position under the various arches, and securely wedged up to the soffit with oak wedges.

"In ordering the first lot of timber for this framing it was assumed that timber in the log, with one side only sawn, would answer every purpose required as well as timber sawn all round; but this proved to be a mistake, as it was found to be an impossibility to square to the tenons, mortices, shoulders, and bearings, without having at least three sides of every piece sawn die square. There being no sawpits near the building, this timber was squared with adzes and planes where required, causing some loss of time; but the next consignment of timber having three sides sawn square, much facilitated the work of fitting together and makes much better work in every way.

"Three arches having been shored up with centering, as described, the fourth arch was treated as follows: a hole about eighteen inches square was knocked through the tower wall over the apex of the arch, and about two feet above it, to allow sufficient head room for the introduction of a hammered stone



discharging arch over the wrought stone arch. Two more holes were knocked through the wall of the same size, about 2 feet lower down on either side,\* about halfway between the centre of the arch and the transept flank walls. Three holes were thus made to take needles at distances of about  $4\frac{1}{2}$  feet apart.

"Needles 12 inches by 12 inches were inserted through these holes and supported by uprights inclining inwards at the top, and stiffened at the height of every 5 feet by means of straining pieces secured with dog irons. The walling over the needles was pinned up, and wedged in every case with flat stones bedded in cement; and when the cement had set, a temporary centre was fixed under the arch, the key removed, and all the arch stones safely taken down one by one; one-half the piers on either side were also removed, and the entire space occupied by the arch and piers cleared away to allow of the erection of the new work."†

\* The arrangement in the Drawing on Pl. VIII., which shows lintels inserted over the needles, and the needles themselves all on the same level, is considered by Mr. Seddon to be better than that actually executed and here described. The framing also is shown as fitted to a restored arch, it having been found impracticable to delineate the actual distortion of the piers and arches.

† The following details of the weight thus carried, with the calculations as to the manner in which it was distributed, and the breaking weights of the several portions of the timber framings employed, are appended by Mr. Seddon at the end of his paper:—

By actual experiment, ashlar in spire is found to weigh 1·527 cwt. per cub. ft.

" " rubble masonry in tower weighs 1·33 cwt. per cub. ft.

There are in spire 2534 cub. ft., weight (at 1·527 cwt. per cub. ft.) = 3869·418 cwt. = 193·47 tons.

There are in tower 9·016 cub. ft., weight (at 1·33 cwt. per cub. ft.) = 11991·28 cwt. = 599·564 tons.

There are six bells, framing and floor, weighing about 5 tons.


Total weight at arch springings = 798·034 tons.

There is no discharging arch over tower arches. Actual working sectional area of each arch, 3·45 ft. super. Many stones fractured.

Sectional area of each pier, wrought facing, 8·34 ft. super.; rubble core, 9·66 ft. super.; total area, 18 ft. super.


Weight on each pier, 199·5 tons = 11·08 tons to the ft. super. On failure

# PLATE VIII.

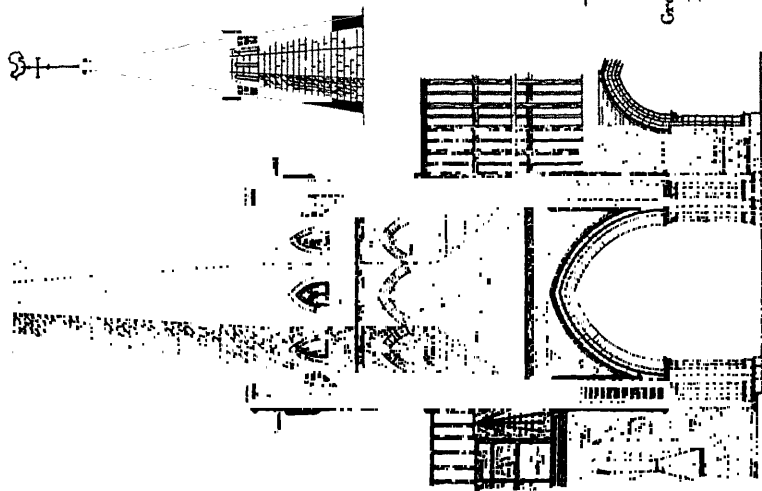

Longitudinal Section three Tower and Spire.

Scale of 20 feet.

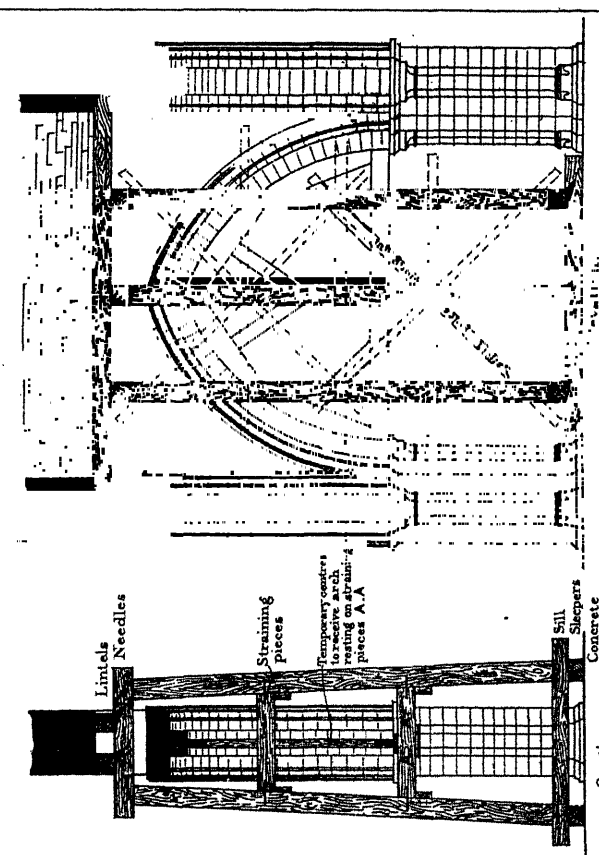

Section.

Plan.

Grosvenor Church, Shoring of Tower.  
Needling over North Arch.  
at Y on Plan.

Scale of 10 feet.

C. Haden, Sect. Del.



The three remaining arches were afterwards similarly restored, and the tower and spire now stand upon a base which will remain immovable for all future time.

The most important lesson to be learnt from this example is the same as that taught us by the memorable fall of the tower and spire of Chichester in February, 1861, viz., that when a heavy load is to be placed upon piers and arches, it is madness to build the piers in rubble masonry with ashlar work only as a casing. The piers which are to carry such a load should be built in ashlar or dressed stone-work throughout their entire thickness, as was done by Mr. Scott (afterwards Sir Gilbert) in the rebuilding of the piers at Chichester. If such a method is found to be impracticable on account of its cost, the core of rubble masonry must at all events be built in cement, so that there can be no possibility of its settling down and leaving the weight to be carried by the casing only.

The method of restoration adopted at Grosmont may be briefly recapitulated as follows :—All the four arches and piers being unsafe, it was determined to restore them, i. e. replace them in new work ; there being only funds enough to admit of the restoration of one arch, it was decided to restore that arch which, with its piers, was found to be in the most dangerous condition, consequently the wall above this arch (the north arch) was needled, and the other three arches were temporarily centred to prevent their falling before they could be attended to in their turn. The arch under the needles was then taken

of the rubble coring, the ashlar facing doing duty for the whole pier carried 23·92 tons, and was crushed.

Actual total weight per ft. square on foundation, 11·71 tons.

Breaking weight of the three needles, 216 tons ; weight of one side of tower at level of needles, 170 tons ; estimated actual weight of the needling, 70 to 75 tons. (The corbelling to octagon, with arching over, throws from 40 to 50 tons on each quoin N.W. and N.E. These quoins rest on the parts of the piers allowed to stand.) The load on the needling being only temporary, a co-efficient of safety of only 3 was adopted.

Actual breaking weight of *each* warped-up centre, 1050 tons ; weight on each 199·5 tons ; safe working permanent load, 210 tons : co-efficient of safety, 5.

down and half the piers on either side, to be replaced in new work set in cement. Now it must be remembered that although the north wall of the tower was carried on the needles and the east and west arches had centres under them which would only break under a load of 1,050 tons, yet the north-east and north-west quoins of the tower (which were estimated by Mr. Seddon to weigh 50 tons each) had nothing to carry them but the portions of the piers which were allowed to remain standing; these must in this case have been strong enough to carry this weight; but the reader's attention is drawn to this point because, in many instances of similar restoration, the core of rubble work may be so decayed as to be utterly incapable of bearing the quoins, even for so short a time as would be necessary; in such a case the quoins themselves, and all the four walls round the tower, must be shored with needles and posts, so as to take as much of the superincumbent weight off the piers as possible: it is a mistake to suppose that centering under the arches entirely relieves the piers of their load.

The reader will have noticed in Mr. Seddon's paper that the idea suggested itself of restoring the crushed piers and arches of the tower at Grosmont by taking out a damaged stone here and there, and replacing the stones so removed with other sound stones; this method, though found to be impracticable in this case because of the piers being so much out of the perpendicular, has still been carried out with complete success in many other cases. But when such a method is adopted, the greatest care must be taken that the piers to be recased are first almost entirely relieved of their load by shores and centres, and that only small portions are renewed at a time.

These old Gothic buildings require the most gentle handling; for if they have once been damaged by fire or storm, or if at any previous time they have sunk down or become distorted, it takes very little to upset the state of equilibrium into which they have settled, though they may have remained in that state for hundreds of years. The fall of the tower at Chichester, though hastened by the storm of wind which raged during the

night before the catastrophe, was no doubt originally brought about by the disturbance caused to the equilibrium of the piers by the removal of the organ screen which spanned the nave at their feet, and also by the manner in which it was attempted to recase the piers after their dangerous condition had been discovered. So, whenever it is necessary to make any alteration or to underpin a building, every possible precaution must be taken that the equilibrium is not upset or the building shaken. In a speech delivered at the Institute of British Architects, and recorded in their "Transactions" at the time of the Chichester disaster, Sir Gilbert Scott thus describes the work that was carried out under his supervision at the Church of St. Mary at Stafford, which is an example of the stone-by-stone method of restoration:—

"The first operation," he says, "was to bind the tower round (internally) with very strong iron bars, with right and left screws, which were screwed up as tight as possible. This was done at two different levels. We then dug round the base of the tower as low, at least, as the bottom of the foundations, removed the remains from all surrounding graves (which had, as is too often the case, done very great mischief, being much deeper than the foundations), and filled up the whole space with a solid mass of concrete. Having shored the arches and the piers, so as to carry as much as possible of the superincumbent weight, we began gradually to remove the loose stonework and to put in new (or rather additional) foundations, spreading out upon the new concrete. This operation requires a system of movable shoring quite distinct from the more permanent shoring already mentioned. This secondary shoring is continually being moved upwards as the work proceeds, no part of the old work being taken out at one time beyond what is necessary to give room for the insertion of the new portions actually in hand at the time. In each course, or at short intervals in the height, we inserted chain bars (which are best of copper) in short lengths, but so constructed as eventually to form continuous ties all round the pier. In effecting these

operations, I was brought to the conclusion that it is impossible to exaggerate the danger and the difficulty that exists in providing shoring of sufficient strength; for in this, as in every work of the kind in which I have been engaged, I found that all the shoring that I could by any possibility get in was only barely sufficient for the purpose. I have seen enormous timbers bend under the pressure to which they have been subjected, and I wish to offer my most decided opinion that in most cases it is absolutely necessary, before a single stone is removed, to insert all the shorings which can be brought to bear within the space to be operated upon. I would also advise that in no case should the shores be half timbers, or timbers of an oblong section, but that they should be of square or round timbers, so as to have no tendency to bend in one direction more than in another (in large works, indeed, the shores must be larger than single timbers). In one case (a minor work) which I had in hand, I had expressly provided for the use of whole timbers in the specifications; but the clerk of the works had permitted half-timbers to be used, and the consequence was that the shoring gave way very perceptibly, much to the detriment of the work. Another precaution I would recommend is the use of the hardest stones which can be procured, for if this be neglected, the new work is almost sure, when the shoring is removed, and the weight brought to bear upon it, to split; and it is needless to say that cracks in such supplemented masonry are far more dangerous than in a new structure, for by throwing the weight upon the old core (if any remains), or upon piers not yet repaired, or upon other old work, such partial failure of the new stonework may lead to the most serious consequences. Under no circumstances, therefore, should anything approaching a soft stone be made use of, whatever may be the materials of the old pier. The next thing I would urge is the avoiding of ordinary *lime* mortar, and the use of *cement*. Besides setting the new work and pinning it in cement, it has been my practice to run the core behind with liquid cement, first pouring in water and then the cement grout, which, when thus used, I have found in some cases to

penetrate the interstices to a depth of nine to ten feet below the level at which it was poured in, as if it were so much quicksilver. While engaged upon these works on one occasion a loud report was heard by the workmen, like the report of a gun, and it was found that one of the pillars of the chancel (quite unconnected with the tower) had split almost from bottom to top, owing to some indirect pressure brought upon it by the operations going on at the tower, which shows that the shoring should not be limited to the tower itself, but should in some degree be extended to adjoining parts. The shoring should have in all cases a special foundation provided for it. The floor of the church is wholly insufficient for the purpose, and it would be a fatal error to trust to it."

The reparation of the tower of Hereford Cathedral by the late Mr. Cottingham, though on a much larger scale, was in all other respects nearly identical with Sir Gilbert Scott's work at Stafford, which has just been described. In all these examples, a good foundation of concrete for the shores was of paramount importance. M. Flachet, before he erected the mammoth shoring which held up the tower and lantern over the crossing at Bayeux Cathedral, sank around the feet of the four piers to a hard stratum no less than twenty wrought-iron tubes of 4 feet diameter internally, which he filled up with concrete; and upon these tubes, and between the foundations of the piers, he laid a bed of concrete 9 feet thick, the top of the tubes entering 3 feet into this concrete. The weight of the shores and the tower which they had to carry was of course very considerable, and fully justified the extreme caution taken with these foundations.






A brief description of this work is thus given by Mr. Burnell in a paper published in the "Transactions of the Royal Institute of British Architects":—"Upon the concrete bed," described above, "M. Flachet erected a double set of frames of whole timbers on either side of the centres originally placed to support the arch (before M. Flachet was called in), for the purpose of forming a seating for a set of needles carried upon a series of screw-jacks, and made to support the masonry of the square



part of the tower, a little above the vaulting of the nave and transept. The tower was carefully hooped with iron bars keyed up whilst they were still hot, so that their shrinkage actually closed the masonry which had previously been fissured over the openings; and before altering the centres to the form M. Flachet thought requisite, he also surrounded the springings of the arches of the nave with a strong wrought-iron cradle, intended to resist the lateral thrust. The centres were then strengthened and modified so as to allow the easy underpinning of the piers; and the lateral arches of the nave, choir, and transepts, which had participated in the movements of the piers of the tower, were carefully shored up. Every precaution was taken to protect the original mouldings of the vaulting, and the sculpture of the capitals, columns, and bases, by enclosing them with rubble masonry, against which the shores were made to act directly." (It should be mentioned that the four quoins of the tower were needed, by a system of needle shoring totally independent of that already described, on each side of the centres of the great arches. The needles carrying the quoins were each made of three wrought-iron girders bolted together with four timber fitches, forming one exceedingly strong beam; four of these needles lying across each other, and forming a square on plan, were inserted just under the neckings of the caps, at the top of each of the four piers, and were carried by sixteen massive posts, each made of nine whole timbers strongly bolted together, in the same manner in which the masts of a ship are constructed. These posts were each 16 metres high (52·52 feet), and conducted the weight of the quoins straight down to the bed of concrete on the ground.) "It is to be observed that the needling was totally independent of the centres of the great arches, and was designed solely to support the weight of the tower and octagon above the line of the vaulting; the arches and the spandril fillings were all that bore directly upon the centres themselves."

When all this shoring was erected (and it completely filled up the crossing, being braced across and across the space), the



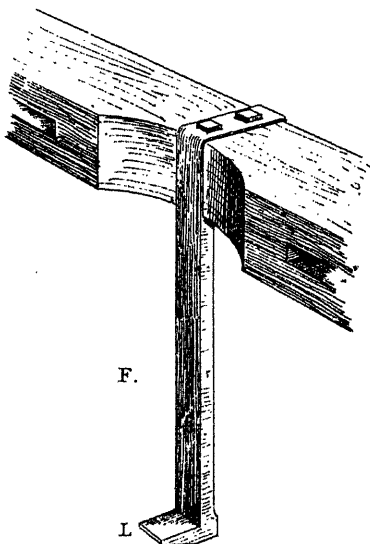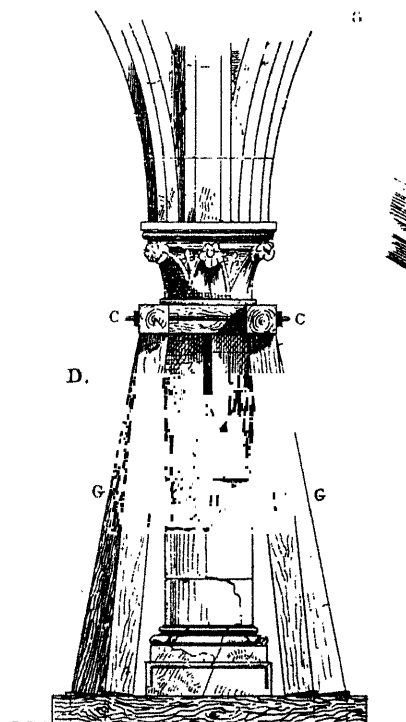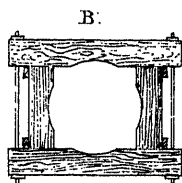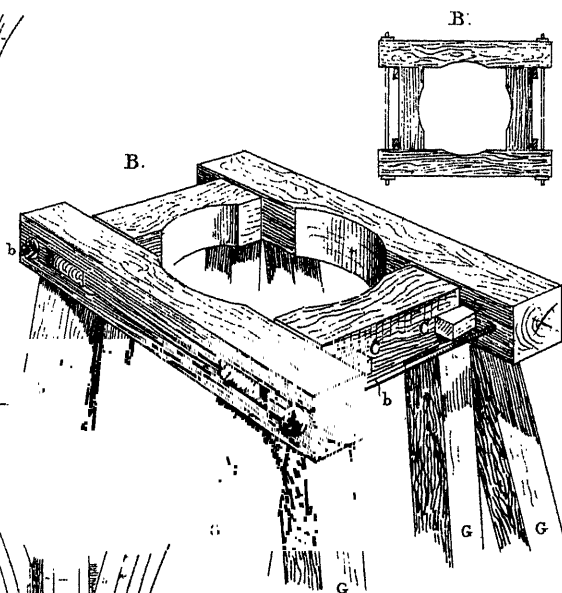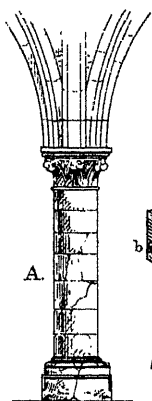

piers were entirely removed from under the tower, and rebuilt from their foundations, and the arches were restored by the stone-by-stone method.

The cost of this work was 32,220*l*. M. Viollet-le-Duc, whose opinion was consulted before it was decided how the tower should be treated, gave it as his opinion that the simplest and cheapest plan was to pull it down altogether and rebuild it from its foundation, and he estimated the cost of this at a sum considerably smaller than 32,220*l*. But even if M. Viollet-le-Duc was right, there will always be a satisfaction, to archæologists at least, that the original tower was preserved intact. On the top of the Gothic lantern there was an Italian Renaissance dome, which was removed before the tower was underpinned.

The success of this operation is, however, considerably marred when it is compared with the stone-by-stone underpinning of the tower of Hereford Cathedral by Mr. Cottingham, where, although the weight underpinned was double that at Bayeux, the money expended was less than one-fourth. The weight of the spire at Chichester was also nearly double the weight of the tower at Bayeux, and as it would have been necessary to employ the same method to restore it satisfactorily as was used at Bayeux, on account of the rottenness of the piers, it is perhaps as well from an economical point of view that it fell down, especially as not a life was lost nor a limb broken.

The cost of rebuilding it was in round numbers 50,000*l*., and had it been underpinned as the Bayeux tower, the operation would probably have cost much more than this.


We will now go on to consider the suppositional cases of underpinning depicted on Plates IX. and X., which are copied from M. Viollet-le-Duc's Dictionary under the word "*Etai*." The following is a synopsis of the treatment of these cases described in that work.

Taking the first case on Plate IX., the cylindrical column A, which carries vaulting ribs in all directions, and one or two stages of similar columns above, has become crushed under the load, as shown in the sketch. In order to enable the damaged


stones to be removed we must construct a square frame of oak, as indicated in the sketch, B in perspective, and in B' in plan, with sides tenoned into gaping mortices, into which wedges are driven at C, which with the bolts *b* insure the frames being fitted tightly against the face of the cylinder. This frame is fitted (as at C, in the sketch D) under the necking of the capital, and is carried by eight stout posts G, inclined sufficiently to allow the new stones which replace the old at K H to pass in freely. Should there be any sound stones below the necking, four wrought-iron straps must be screwed, as shown in the sketch F, to the sides of the frame, and their feet L inserted in the joint, to catch the under side of the last sound stone; the rest of the column can then be removed and replaced in new work.

If the whole of this lower column is crushed, together with the springing stones of the vault, the vaulting ribs must be centred, and the column above must be treated in the way we have just described for the lower column, the eight posts passing through the vaulting panels to the ground below.

The second case depicted on Plate X, is a neat application of the principle of needle shoring. A pier E, which carries two main arches A', two diagonal arches B', and one transverse arch C', as well as the weight of the upper vault, has become crushed under the load. In this case, where it will be necessary to use so many timbers in so small a space, we must take care to arrange them so that they will not interfere with the building of the new work. "To shore is nothing, but to shore in such a way that one can build between the shores is often a difficult problem to solve." The transverse and diagonal arches having been centred, the two main arches should be supported as shown at A in the elevation, and the springing stones of the arches from I to K, which have shared in the ruin of the pier, can then be taken out and notches cut to receive the needles at L L. The needles, in order to occupy as small a space as possible, are each made of four strong pieces of wrought iron, bound together with hoops as shown at M; they are made to

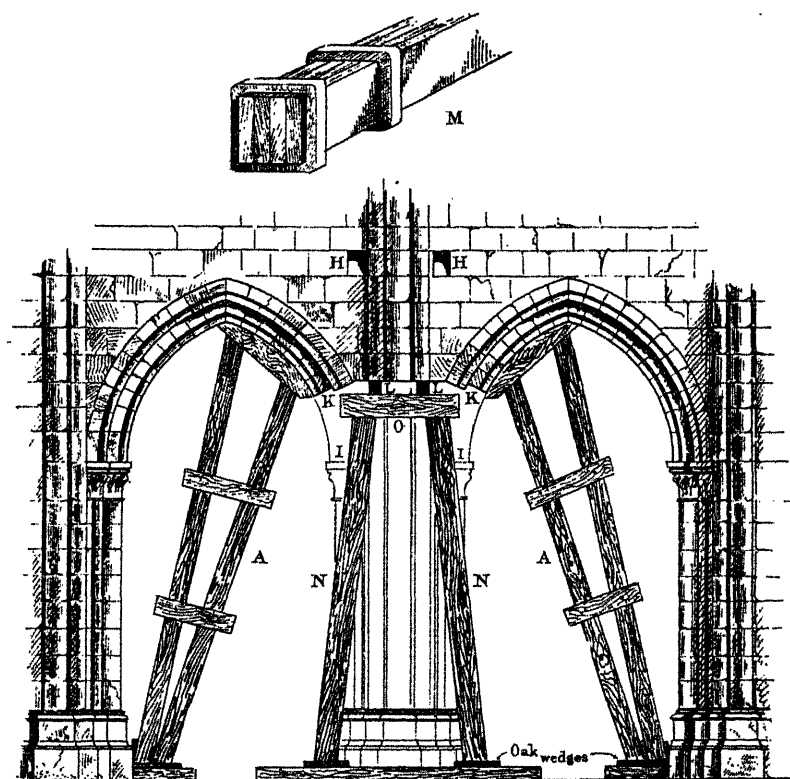

Elevation.

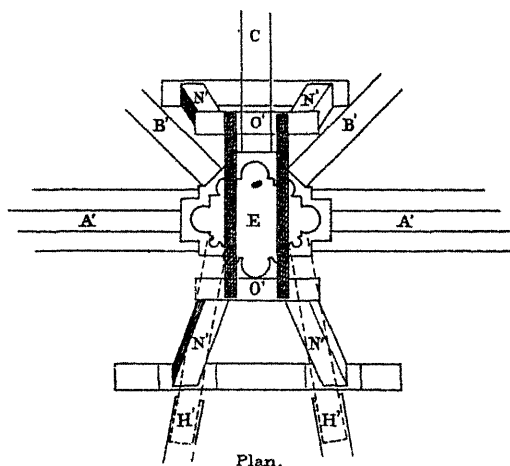

Plan.



rest upon strong pieces of oak at O in the elevation and O' on the plan, and are carried by the four stout posts N and N'. It will also be necessary to support the wall above the needles with raking shores at H and H'.

When the old work has been removed and the new work finished, the posts and needles should be taken down first, then the centres under the arches, and last of all the raking shores at H and H'.



## CHAPTER VII.

## ON THE MECHANICS OF RAKING SHORES.\*

WE will suppose C B (Plate XI.) to represent the section of a wall that requires to be supported by the raking shore A B, resting on the ground at A; A C being the ground line. Let there be a horizontal force T near the top of the wall at  $d$ , tending to overturn it about its bottom edge C; the moment of this force, which measures its tendency to overturn the wall, is—

$$T \times C d.$$

This is resisted by the weight of the wall (W) acting vertically at its centre, and having a moment about C of

$$W \times C e,$$

where  $C e$  is generally half the thickness ( $t$ ) of the wall. When these forces just balance, the wall will be about to fall over, and the two moments will be equal; therefore—

$$T \times C d = W \times C e.$$

Now, in order to restore the wall to its original condition before the force T acted upon it, we must find some means of completely balancing this force, and this can be done by placing the shore A B against the wall at B, where it is firmly fixed against a plank or *walling piece* by means of a *needle* driven through both the plank and the wall; then by wedging up the base A, a horizontal pressure (Q) is produced against the wall, such that the moment of Q about C balances that of T, or

$$\begin{aligned} Q \times B C &= T \times C d \\ &= W \times C e \end{aligned}$$

$$\therefore Q = \frac{W \times t}{2 B C} \dots (I.)$$

\* Copied from an article in the *Building News*.

In this formula, B C and  $t$  should be expressed in feet, W and Q in cwts. If the shore presses against B with a horizontal force Q, there must also be a reaction of the wall against the shore equal and opposite to Q, so that Q represents a horizontal pressure against the head of the shore.

In order that the raking shore may have its full effect in counteracting the outward thrust or reaction Q, it is essential that it should be prevented from sliding upwards by having a sufficient weight of wall above B, so that when the pressure Q comes upon it, the head of the needle may be kept immovable by means of the superincumbent load. If, therefore, the top of the shore is put very high up against the wall, it will be of little service in preventing it from being overturned. Let P be the vertical pressure necessary to resist a horizontal thrust outwards, equal to Q at B, and  $w$  the weight of the shore itself acting at its centre  $g$ . Then the sum of the moments of P and  $w$ , about A, the base of the shore, must balance the moment of Q about that point; therefore, we have—

$$Q \times A g = (P \times A C) + w \frac{A C}{2},$$

B  $g$  being a horizontal line meeting a vertical from A at  $g$ . This equation may be put into the form—

$$Q \sin. \theta = \left( P + \frac{w}{2} \right) \cos. \theta;$$

$\theta$  being the angle B A C which the shore makes with the horizontal; and from this we obtain—

$$P = Q \tan. \theta - \frac{w}{2} \dots (II.)$$

So that when Q and  $w$  are known, and also the angle of inclination of the shore, we can find from this equation what vertical pressure (P) must be brought to bear on the head of the shore, in order to keep it in its place when the force Q tends to thrust it out. If the value of P is known beforehand, we can also find

what amount of horizontal force ( $Q$ ) it will be able to counter-act; for

$$Q = \frac{2P + w}{2 \tan. \theta} \dots \dots (III.)$$

The horizontal and vertical forces at B being thus determined, we can find the compression ( $F$ ) down the shore by resolving  $P$  and  $Q$ , in the direction of A B, and adding their resolved parts together; therefore, we have—

$$F = P \sin. \theta + Q \cos. \theta \dots \dots (IV.)$$

In order to find whether the shore is strong enough to resist this compression, we must use the formula for a long pillar, namely

$$L = a \times \frac{d^4}{l^3}$$

Where  $a = 15.5$  for fir,  $d$  is the diameter or width in inches, and  $l$  the length in feet;  $L$  being the safe load in cwt. that may be put on the pillar. As, however, the depth of a shore is usually double its width, we shall get twice the resistance, as obtained by the above formula, or  $F$  should not exceed—

$$\text{Safe load} = 31 \times \frac{d^4}{l^3} \dots \dots (V.)$$

There will also be produced a cross-strain,  $S$ , acting at right angles to the shore, and tending to bend it inwards, which is equal to the resolved parts of  $P$ ,  $Q$ , and  $w$ —namely,

$$P \cos. \theta, Q \sin. \theta, w \cos. \theta.$$

And since these strains are uniformly distributed over the entire length of A B, the total amount of cross-strain at the centre is equal to half their sum, or

$$S = \frac{1}{2} \{Q \sin. \theta + (P + w) \cos. \theta\}.$$

If we substitute for  $P$  its value as found from (II.), we have

$$S = Q \sin. \theta + \frac{w}{4} \cos. \theta \dots \dots (VI.)$$

To find the deflection ( $D$ ) in the middle which the cross-strain  $S$  will produce on a beam of fir, we use the formula—

$$D = \frac{S}{27} \times \frac{l^3}{b \cdot d^3} \dots \text{(VII.)}$$

The dimensions,  $D$ ,  $b$ , and  $d$ , being in inches, and  $l$  in feet;  $S$  is to be expressed in cwt. If the value of  $D$  thus obtained is an appreciable quantity, it will be advisable to counteract the cross-strain by a strut  $g h$ , so as to prevent the resisting power of the shore from being impaired; and the force  $S$  will represent the compression down this strut. If we wish to find what ratio  $S$  bears to the breaking-weight of the shore we can use the formula—

$$\text{Breaking-weight} = 3.2 \times \frac{b \cdot d^2}{l} \dots \text{(VIII.)}$$

$b$  and  $d$  being in inches, and  $l$  in feet; the breaking-weight is found in cwt. The strain  $S$  must not exceed one-sixth of the breaking-weight thus obtained.

We can now determine the magnitude and direction of the resultant ( $R$ ) of all the forces, its point of action being at the base  $A$  of the shore. Suppose this resultant to make the angle  $\phi$  with the horizontal  $AC$ , then by the rules of mechanics we have

$$R \cdot \cos. \phi = Q$$

$$R \cdot \sin. \phi = P + w$$

$$\text{from (II.)} \quad = Q \cdot \tan. \theta + \frac{w}{2}.$$

$$\text{But, } R = \sqrt{\sin.^2 \phi + \cos.^2 \phi}$$

$$\therefore R = \sqrt{Q^2 + (P + w)^2} \dots \text{(IX.)}$$

from which we obtain the magnitude of the resultant  $R$ . To find the direction of  $R$  or the value of the angle  $\phi$ , we have

$$\tan. \phi = \frac{R \cdot \sin. \phi}{R \cdot \cos. \phi} = \frac{P + w}{Q}$$

$$= \tan. \theta + \frac{w}{2Q} \dots \text{(X.)}$$

This last formula shows us that the greater we make the horizontal force  $Q$ , the more nearly will the angles  $\phi$  and  $\theta$  approach to equality, or the direction of  $R$  get nearer and nearer to that of the shore, for the quantity  $\frac{w}{2Q}$  diminishes with the increase of  $Q$ . The minimum value that  $Q$  can have is when  $P$  is nothing, or the head of the shore merely rests against the wall, and is not pressed upon by any vertical force, in which case we find from (III.) that the value of  $Q$  is

$$Q = \frac{w}{2 \tan. \theta},$$

and substituting this value for  $Q$  in (X.) we obtain

$$\tan. \phi = 2 \tan. \theta.$$

In this case, therefore, the direction of the resultant becomes that of the line  $A E$ . We see, then, that the resultant force  $R$  may have any direction between  $A E$  and  $A B$ , according to the amount of the pressure  $Q$ ; but it will generally lie nearer to  $A B$  than to  $A E$ , and consequently it is advisable to have the abutment at  $A$  very nearly at right angles to the shore  $A B$ , in order that any horizontal thrust at  $A$  may be counteracted by the resistance of the earth.

Example.—We will now show the practical application of these ten formulæ, by taking the case of a brick-and-a-half wall, 40 feet high and 10 feet frontage, supported by a raking shore of fir 12 inches by 6 inches, the top of which is 30 feet above the base of the wall, and its spread at the foot 6 feet. The angle  $\theta$ , or  $B A C$ , will be  $78^\circ 41'$ ,  $\tan. \theta = 5$ ,  $\cos. \theta = .19623$ ,  $\sin. \theta = .98056$ , and the weight  $w$  of the shore is 4.5 cwt. Taking the wall at 1 cwt. per cubic foot, its  $W$  will be 467 cwt.; its thickness  $t$  being  $\frac{7}{6}$  of a foot.

We first find the maximum horizontal thrust  $Q$  from (I.)

$$Q = \frac{W \cdot t}{2 \cdot B C} = \frac{467 \times \frac{7}{6}}{60} = 9 \text{ cwt.}$$

The vertical pressure  $P$ , which  $Q$  produces, is obtained from (II.),

$$\begin{aligned} P &= Q \tan. \theta - \frac{w}{2} \\ &= (9 \times 5) - 2\frac{1}{4} = 43 \text{ cwt., nearly.} \end{aligned}$$

This is the least value of the pressure upon the top of the shore that will counteract the outward thrust  $Q$ ; but, as in this case, the actual weight of wall above  $B$  is 117 cwt., or nearly three times as much as the above value of  $P$ , we see that there is but little danger of the shore being pushed out by  $Q$ , provided it is tightly wedged up at  $A$  and  $B$ , as the shore cannot be turned about the base  $A$  without its head being lifted up, which would cause the needle to rise, and also the wall above it. For, if we put  $P' = 117$ , we find from (III.) the value of  $Q'$  necessary to make the shore lift this load,

$$Q' = \frac{2 P' + w}{2 \tan. \theta} = \frac{238.5}{10} = 23.85 \text{ cwt.}$$

which is more than  $2\frac{1}{2}$  times the maximum value of  $Q$  as given above.

The horizontal and vertical forces ( $P$ ,  $Q$ ) being known, we can find the compression  $F$  which they produce on the shore in the direction of its length from (IV.),

$$\begin{aligned} F &= P \cdot \sin. \theta + Q \cdot \cos. \theta \\ &= (43 \times .98056) + (9 \times .19623) \\ &= 44 \text{ cwt.} \end{aligned}$$

From (V.) we can ascertain what is the safe load that such a pillar will sustain, the length being 30.6 feet, and the diameter 6 inches;

$$\begin{aligned} \text{Safe load} &= 31 \times \frac{d^4}{l^3} \\ &= 31 \times \frac{6^4}{(30.6)^3} = 43 \text{ cwt.} \end{aligned}$$

which agrees very nearly with the value of  $F$  obtained above.

The cross-strain  $S$  produced at the middle of the shore, and acting at right angles to its depth, is found from (VI.)

$$\begin{aligned} S &= Q \cdot \sin. \theta + \frac{w}{4} \cos. \theta \\ &= (9 \times .98056) + (1 \cdot 12 \times .19623) \\ &= 9 \text{ cwt.} \end{aligned}$$

From (VII.) we can find the deflection which this strain of 9 cwt. will cause at the middle of the beam,

$$\begin{aligned} D &= \frac{S}{27} \times \frac{l^3}{b \cdot d^3} \\ &= \frac{9}{27} \times \frac{(30.6)^3}{6 \times 12^3} = .92 \text{ inch.} \end{aligned}$$

In this case, as there is a deflection of nearly 1 inch at the middle of the shore, it will be advisable to introduce a strut  $g h$ , otherwise its resisting power as a pillar will be impaired. The compression down the strut will be the above value of  $S$ , or 9 cwt.

The breaking-weight at the middle of the shore may be found from (VIII.)—

$$\begin{aligned} \text{Breaking-weight} &= 3.2 \times \frac{bd^2}{l} \\ &= 3.2 \times \frac{6 \times 144}{30.6} = 90 \text{ cwt.} \end{aligned}$$


which is ten times the strain  $S$ , which we have just obtained.

The pressure which the resultant force  $R$  exerts on the base  $A$  can be calculated from (IX.)—

$$\begin{aligned} R &= \sqrt{Q^2 + (P + w)^2} \\ &= \sqrt{9^2 + (45 + 2.25)^2} \\ &= 48 \text{ cwt,} \end{aligned}$$

The direction in which this force  $R$  acts at  $A$ , or the angle  $\phi$ , which it makes with  $AC$ , is found from (X.)—

$$\begin{aligned} \tan. \phi &= \tan. \theta + \frac{w}{2Q} \\ &= 5 + \frac{4.5}{18} = 5.25. \end{aligned}$$

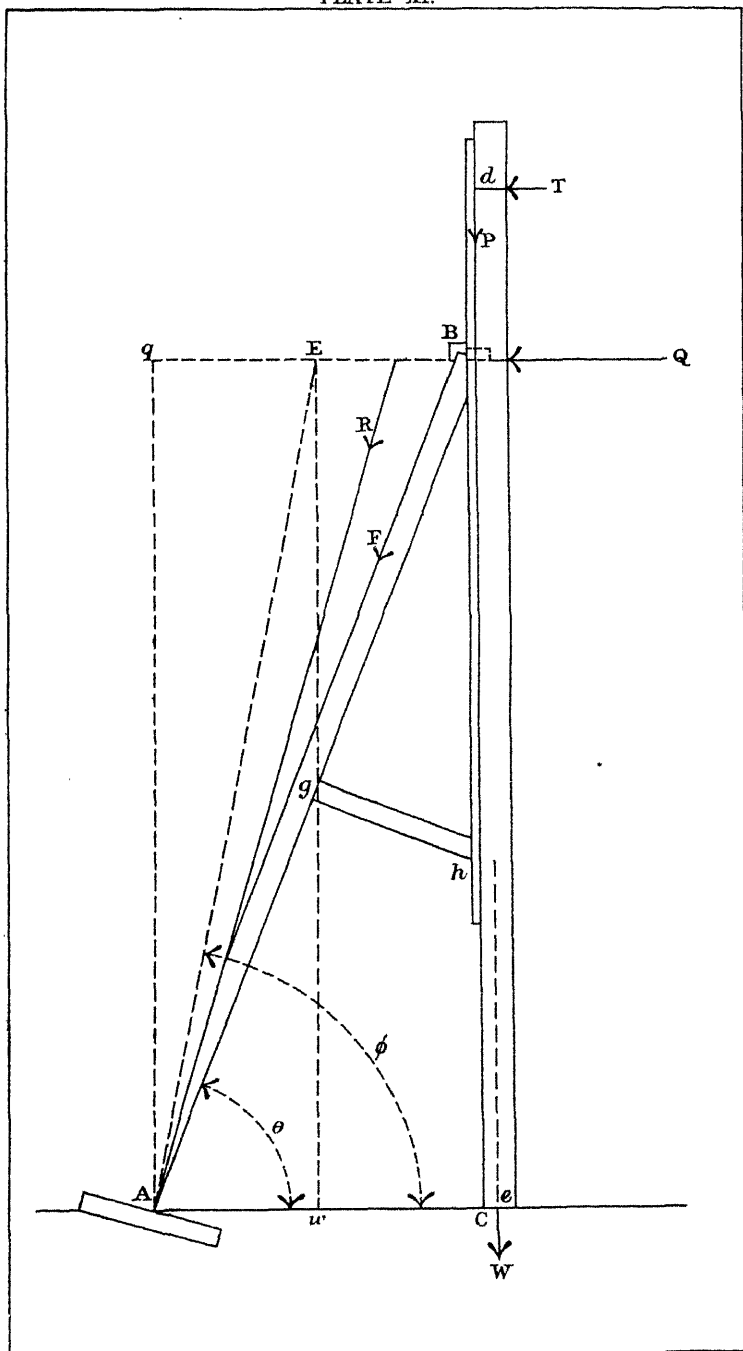





By referring to a table of natural tangents, we find that 5.25 is the tangent of  $79^{\circ} 13'$ , so that the direction of R makes an angle of only half a degree with the shore itself, when Q presses with its maximum force against the head of the shore.

When P is nothing, the direction of the resultant is A E, and  $\tan. \phi = 2 \tan. \theta = 10$ , in which case the angle E A C =  $84^{\circ} 18'$ ; the value of the angle  $\phi$ , therefore, will in any case lie between  $79^{\circ}$  and  $84^{\circ}$ , according to the amount of the reaction (Q) at B.

---

The above example, it should be borne in mind, is taken for the case of one shore only in a system of raking shores; but when two or more shores are erected against a wall in the same perpendicular plane, each shore must be considered as resisting the outward thrust of its own portion of the wall only, and a separate value of Q must be found for each of them.

It is perhaps needless to say that in practice it would not be necessary to make use of all the formulæ which have been proved and demonstrated in this chapter, but for the sake of those who are fond of mathematical investigation the whole science has been laid down in its completeness. An example which shows the application of the more useful of these formulæ has already been quoted at the end of the chapter on raking shores, and it will be found that the rules there given will be all that are really necessary in actual practice.

In conclusion, I must apologise to my readers for the somewhat condensed form in which the proofs of the several formulæ are worked out; but as I had previously stated that this chapter is only intended for those who are well acquainted with the science of Trigonometry and Statics, I concluded that any more elaborate explanation of the way of arriving at the different steps in the proofs would be unnecessary.



# INDEX.

---

ANGLES of raking shores, 11

BAYEUX CATHEDRAL, shoring at, 61

Best wood for shores, 17

Braces, 7

CHEICHESTER tower and spire, failure of, 57, 58

Cross strain on raking shores, 8

DANGEROUS structures, 24

„ „ clauses of London Building Act relating to, 37

Distance apart of systems of raking shores, 10

Dogs, iron, 10

EXPANSION of cement, 27

FAILURE of foundations, 25, 31

Flying shores, 19

Forces acting on shores, 5, 66

Formula for pressure on flying shores, 20

Formulæ for needle shoring, 36

„ pressure on raking shores, 12, 66

GROSMONT CHURCH, shoring of, 45

HEAD of shore, position of, 6

Horizontal shores, 19

JOGGLE, 4

LEVERING foot of shores, 6

Lime concrete in underpinning, 28

MECHANICS of raking shores, 66

Mediæval buildings, shoring of, 44, 63

- NEEDLE SHORING, 23, 24  
Needles, 4, 10, 32  
Number of shores in systems, 9
- OBJECTIONS by neighbours to flying shores, 21
- POSITION of head of shore, 6  
,, needles, 32
- RAKING shore, simplest form of, 4  
,, shores, systems of, 7  
Reinstatement of leaning walls, 16, 17  
Responsibility of architects, 33  
Rider shores, 8
- SCANTLINGS of flying shores, 21  
,, raking shores, 9  
Scarfs in raking shores, 9  
Shores, numbers in systems, 9  
Shoring of mediæval buildings, 44, 63  
Simplest form of raking shore, 4  
Sole piece, 4, 11  
Stafford, shoring at St. Mary's Church, 59  
Systems of raking shores, 7
- TOSSE, 4  
Trussing of raking shores, 9
- UNDERPINNING, 26
- VARIETIES of raking shores, 15  
Variety of flying shore, 22
- WEDGES, uses and limitations of, 9  
Wood, best for shores, 17

THE END.

*A List of Standard Books*

RELATING TO

BUILDING, ARCHI-  
TECTURE, SANITATION,  
& DECORATION

PUBLISHED AND SOLD BY

B. T. BATSFORD,  
94, HIGH HOLBORN, LONDON.



# A List of Standard Books

PUBLISHED BY

**B. T. BATSFORD, 94, HIGH HOLBORN, LONDON.**

**HOW TO ESTIMATE:** being the Analysis of Builders' Prices. A complete Guide to the Practice of Estimating, and a Reference Book of Building Prices. By JOHN T. REA, F.S.I., Surveyor. With tables of prices in each trade, and a large amount of information for the guidance of Estimators, including thousands of prices. Second Edition, revised and enlarged. Large 8vo, cloth, 7s. 6d. net.

This work is the outcome of many years' experience in the personal supervision of large contracts. It is applicable for pricing in any part of the country, and is adaptable to every class of building and circumstance.

"The book is excellent in plan, thorough in execution, clear in exposition, and will be a boon alike to the raw student and to the experienced estimator. For the former it will be an invaluable instructor; for the latter a trustworthy remembrancer and an indispensable work of reference."—*The Building World*.

**BUILDING SPECIFICATIONS,** for the use of Architects, Surveyors, Builders, &c. Comprising the Complete Specification of a Large House, also numerous clauses relating to special Classes of Buildings, as Warehouses, Shop-Fronts, Public Baths, Schools, Churches, Public Houses, &c., and Practical Notes on all Trades and Sections. By JOHN LEANING, F.S.I. 650 pages, with 150 Illustrations. Large 8vo, cloth, 18s. net.

"Cannot but prove to be of the greatest assistance to the specification writer, whether architect or quantity surveyor, and we congratulate the author on the admirable manner in which he has dealt with the subject."—*The Builder's Journal*.

**BUILDING MATERIALS:** their Nature, Properties, and Manufacture. With chapters on Geology, Chemistry, and Physics. By G. A. T. MIDDLETON, A.R.I.B.A., Author of "Stresses and Thrusts," &c. With 200 Illustrations and 12 full-page Photographic Plates. Large 8vo, cloth, 10s. net.

"The author has collected his materials with rare diligence, and has handled them with workmanlike skill and judgment; and it would be by no means surprising to find 'Middleton on Materials' becoming as popular and as authoritative as 'Leaning on Quantities.'"—*The Building World*.

**THE CONDUCT OF BUILDING WORK AND the Duties of a Clerk of Works.** A HANDY GUIDE TO THE SUPERINTENDENCE OF BUILDING OPERATIONS. By J. LEANING, Author of "Quantity Surveying," &c. Second Edition, revised. Small 8vo, cloth, 2s. 6d. net.

"This most admirable little volume should be read by all those who have charge of building operations . . . It deals in a concise form with many of the important points arising during the erection of a building."—*The British Architect*.

B. 5. 06.



SIXTH EDITION, THOROUGHLY REVISED AND GREATLY ENLARGED.

## BUILDING CONSTRUCTION AND DRAWING.

A TEXT-BOOK ON THE PRINCIPLES AND DETAILS OF MODERN CONSTRUCTION. Specially adapted for Students in Science and Technical Schools. By CHARLES F. MITCHELL, Lecturer on Building Construction at the Polytechnic Institute, London, assisted by GEORGE A. MITCHELL. FIRST STAGE, OR ELEMENTARY COURSE. 400 pp. of Text, with nearly 1,000 Illustrations, fully dimensioned. Crown 8vo, cloth, 3s.

"AN EXCELLENT AND TRUSTWORTHY LITTLE TREATISE, PREPARED AND ILLUSTRATED IN A VERY THOROUGH AND PRACTICAL SPIRIT."—*The Builder*.

"It seems to have most of the advantages of Vols. 1 and 2 of Rivington's 'Building Construction,' with the additional ones of cheapness and conciseness, and appears to be thoroughly practical."—*Mr. J. T. Hurst, Author of the "Surveyor's Handbook."*

"A model of clearness and compression, well written and admirably illustrated, and ought to be in the hands of every student of building construction."—*The Builder*.

FOURTH EDITION, THOROUGHLY REVISED AND GREATLY ENLARGED.

**BUILDING CONSTRUCTION.** Advanced and Honours Courses. By CHARLES F. MITCHELL, assisted by GEORGE A. MITCHELL. For the use of Students preparing for the Examinations of the Board of Education, the Royal Institute of British Architects, the Surveyors' Institution, the City Guilds, &c. 700 pp. of Text, with 660 Illustrations, fully dimensioned, many being full-page or double plates, with constructional details. Crown 8vo, cloth, 5s. 6d.

"Mr. Mitchell's two books form unquestionably the best guide to all the mechanical part of architecture which any student can obtain at the present moment. In fact, so far as it is possible for any one to compile a satisfactory treatise on building construction, Mr. Mitchell has performed the task as well as it can be performed."—*The Builder*.

**BRICKWORK AND MASONRY.** A Practical Text-book for Students and those engaged in the Design and Execution of Structures in Brick and Stone. By CHARLES F. MITCHELL and GEORGE A. MITCHELL. Being a thoroughly revised and remodelled edition of the chapters on these subjects from the Authors' "Elementary" and "Advanced Building Construction," with special additional chapters and new illustrations. 400 pp., with about 600 illustrations. Crown 8vo, cloth, 5s.

"Regarded in its entirety, this is a most valuable work. It is not a treatise, as the term is generally understood, but a compendium of useful information admirably collated and well illustrated, and as such has a distinct sphere of usefulness."—*The Builder*.

## FORTY PLATES ON BUILDING CONSTRUCTION.

—Including Brickwork, Masonry, Carpentry, Joinery, Plumbing, Constructional Ironwork, &c., &c. By C. F. MITCHELL. Revised by Technical Teachers at the Polytechnic Institute. The size of each Plate is 20 in. by 12 in. Price, in sheets, 5s. 0d. Or bound in cloth, 10s. 6d.

**PLASTERING — PLAIN AND DECORATIVE.** A Practical Treatise on the Art and Craft of Plastering and Modelling. Including full descriptions of the various Tools, Materials, Processes, and Appliances employed, and important chapters on Concrete Work, both plain and reinforced. By WILLIAM MILLAR. With an Introduction by G. T. ROBINSON, F.S.A. Containing 600 pp. Illustrated by 53 full-page Plates, and about 500 smaller Diagrams in the Text. 3rd Edition, thoroughly Revised and Enlarged. Thick 4to, cloth, 18s. net.

THE MOST COMPLETE AND VALUABLE WORK EVER ISSUED ON ANY CRAFT.

"'Millar on Plastering' may be expected to be the standard authority on the subject for many years to come, and we congratulate the author on having left such a legacy to his craft as will connect his name with it as intimately and as durably as that of Tredgold with Carpentry. . . . A truly monumental work."—*The Builder*.

"So vast, it might be called an encyclopædia of plastering. . . . The book is of phenomenal cheapness and interest, and we cordially recommend it."—*The Architect*.

"Mr. Millar's book is in all respects admirable; written in a simple, effective style, dealing with the whole field of the art, and showing in its criticisms no lack of historical perspective. . . . It is full of technical information, while the illustrations contain some good examples of the best work of all kinds."—*The Studio*.

**MODERN PRACTICAL JOINERY.** A Guide to the Preparation of all kinds of House Joinery, Bank, Office, Church, Museum and Shop-fittings, Air-tight Cases, and Shaped Work, with a full description of Hand-tools and their uses, Workshop Practice, Fittings and Appliances, also Directions for Fixing, the Setting-out of Rods, Reading of Plans, and Preparation of Working Drawings, Notes on Timber, and a Glossary of Terms, &c. By GEORGE ELLIS, formerly Instructor in Joinery at the Trades Training Schools of the Worshipful Company of Carpenters. Containing 380 pages, with 1,000 Practical Illustrations. Large 8vo, cloth, 12s. 6d. net.

"In this excellent work the mature fruits of the first-hand practical experience of an exceptionally skilful and intelligent craftsman are given. It is a credit to the author's talent and industry, and is likely to remain an enduring monument to British craftsmanship."—*Building World*.

**SCAFFOLDING: A Treatise on the Design and Erection of Scaffolds, Gantries, and Stagings,** with an account of the Appliances used in connection therewith, and a Chapter on the Legal Aspect of the Question. For the use of Contractors, Builders, Clerks of Works, &c. By A. G. H. THATCHER, Building Surveyor. Illustrated by 146 Diagrams and 6 Full-page Plates. Large 8vo, cloth, 5s. net.

"A really valuable little treatise."—*The Builder*.

"The author has had a wide and varied experience of the subject, and his book is clearly written, and essentially practical."—*The Builder's Journal*.

**PROFESSOR BANISTER FLETCHER'S VALUABLE TEXT-BOOKS FOR ARCHITECTS AND SURVEYORS.**

*Arranged in Tabulated Form and fully indexed for ready reference.*

**QUANTITIES.** A Text-Book explanatory of the best methods adopted in the measurement of builders' work. Seventh Edition, revised and enlarged by H. PHILLIPS FLETCHER, F.R.I.B.A., F.S.I. With special chapters on Cubing, Priced Schedules, Grouping, the Law, &c., and a typical example of the complete Taking-off, Abstracting, and Billing in all Trades. Containing 460 pages; with 82 Illustrations. Crown 8vo, cloth, 7s. 6d.

THE MOST COMPLETE, CONCISE, AND HANDY WORK ON THE SUBJECT.

"It is no doubt the best work on the subject extant."—*The Builder*.

"A good treatise by a competent master of his subject. . . . Indispensable to every architectural or surveying student."—*The Building News*.

"Those who remember the earlier editions of this work will thoroughly appreciate the increase in size and the great improvement in quality of this last edition, which certainly makes it one of the most complete works upon the subject."—*The Builder's Journal*.

"We compliment Mr. Fletcher on his revision and on the accuracy of the book generally."—*The Surveyor*.

**DILAPIDATIONS.** A text-book on the Law and Practice of. With the various Acts relating thereto, and special chapters on Ecclesiastical Dilapidations and on Fixtures. Sixth Edition, revised and remodelled, with recent Legal Cases and Acts, by BANISTER F. FLETCHER, F.R.I.B.A., F.S.I., and H. PHILLIPS FLETCHER, F.R.I.B.A., F.S.I., Barrister-at-Law. Crown 8vo, cloth, 6s. 6d.

**LIGHT AND AIR.** With Methods of Estimating Injuries, &c. Fourth Edition, revised and enlarged by BANISTER F. FLETCHER and H. PHILLIPS FLETCHER. With full Reports and Digests of Ruling Cases, and 27 Coloured Diagrams, &c. Crown 8vo, cloth, 6s. 6d.

"By far the most complete and practical text-book we have seen. In it will be found the cream of all the legal definitions and decisions."—*Building News*.

**VALUATIONS AND COMPENSATIONS.** A Text-Book on the Practice of Valuing Property, and the Law of Compensations in relation thereto. Third Edition, rewritten and enlarged by BANISTER F. FLETCHER and H. PHILLIPS FLETCHER, with Appendices of Forms, &c., and many new Valuation Tables. Crown 8vo, cloth, 6s. 6d.

"Very useful to students preparing for the examination of the Surveyors' Institution."—*The Surveyor*.

**ARBITRATIONS.** Third Edition, revised and largely rewritten, by BANISTER F. FLETCHER and H. PHILLIPS FLETCHER. With references to the chief governing cases, and an Appendix of Forms, Statutes, Rules, &c. Crown 8vo, cloth, gilt, 5s. 6d.

"It is as well written and revised as can be, and we doubt if it would be possible to find a more satisfactory handbook."—*The Builder*.

**PROFESSOR BANISTER FLETCHER'S VALUABLE TEXT-BOOKS FOR  
ARCHITECTS AND SURVEYORS—continued.**

**THE LONDON BUILDING ACTS, 1894-1905.** A Text-Book on the Law relating to Building in the Metropolis. Containing the Acts, *in extenso*, together with the unrepealed Sections of all other Acts affecting building, the latest Bye-Laws and Regulations, Notes on the Acts and abstracts of the latest decisions and cases. THIRD EDITION, thoroughly revised by BANISTER F. FLETCHER, F.R.I.B.A., F.S.I., and H. PHILLIPS FLETCHER, F.S.I., Barrister-at-Law. With 23 Coloured Plates, showing the thickness of walls, plans of chimneys, &c. Crown 8vo, cloth, 6s. 6d.

"It is the Law of Building for London in one volume."—*Architect*.

"Illustrated by a series of invaluable coloured plates, showing clearly the meaning of the various clauses as regards construction."—*The Surveyor*.

**CONDITIONS OF CONTRACT** relating to Building Works. By FRANK W. MACEY, Architect. Revised, as to the strictly legal matter, by B. J. LEVERSON, Barrister-at-Law. Royal 8vo, cloth, 15s. net.

**ESTIMATING: A METHOD OF PRICING BUILDERS' QUANTITIES FOR COMPETITIVE WORK.** By GEORGE STEPHENSON. Showing how to prepare, *without the use of a Price Book*, the Estimates of the work to be done in the various Trades throughout a large Villa Residence. Fifth Edition, the Prices carefully revised. Crown 8vo, cloth, 4s. 6d. net.

"The author, evidently a man who has had experience, enables everyone to enter, as it were, into a builder's office and see how schedules are made out. The novice will find a good many 'wrinkles' in the book."—*Architect*.

**REPAIRS: HOW TO MEASURE AND VALUE THEM.** A Handbook for the use of Builders, Decorators, &c. By GEORGE STEPHENSON, Author of "Estimating." Fourth Edition, the prices carefully revised. Crown 8vo, cloth, 3s. net.

"'Repairs' is a very serviceable handbook on the subject. A good specification for repairs is given by the author, and then he proceeds, from the top floor downwards, to show how to value the items, by a method of framing the estimate in the measuring book. The *modus operandi* is simple and soon learnt."—*The Building News*.

**FACTS ON FIRE PREVENTION.** An enquiry into the Fire-Resisting Qualities of the chief Materials and Systems of Construction, conducted by the British Fire Prevention Committee. Edited by EDWIN O. SACHS, Author of "Modern Theatres." Containing Accounts of Tests of Floors, Ceilings, Partitions, Doors, Curtains, &c., with 100 Full-page Plates. 2 vols. Large 8vo, cloth, 25s. net.

**STRESSES AND THRUSTS.** A TEXT-BOOK ON THEIR DETERMINATION IN CONSTRUCTIONAL WORK, WITH EXAMPLES OF THE DESIGN OF GIRDERS AND ROOFS, for the use of Students. By G. A. T. MIDDLETON, A.R.I.B.A. Third Edition, revised, containing new chapters on Designing a Steel Joist and Designing a Steel Plate Girder. With 170 Illustrative Diagrams and Folding Plates. 8vo, cloth, 4s. 6d. net.

"The student of building construction will find all he ought to know as to the relation of stresses and thrusts to the work he may be engaged in. Foundations, chimneys, walls, roofs, steel joists, girders, stanchions, are all taken in detail, and the varying degrees of stress are calculated in a simple way, so that the merest tyro in mathematics will be able to appreciate and apply the principles laid down."—*The Surveyor*.

**THE ELEMENTARY PRINCIPLES OF GRAPHIC Statics.** Specially prepared for the use of Students entering for the Examinations in Building Construction, Applied Mechanics, Machine Construction and Drawing, &c., of the Board of Education. By EDWARD HARDY, Teacher of Building Construction. Illustrated by 150 clear Diagrams. Crown 8vo, cloth gilt, 3s. net.

Prof. Henry Adams, writing to the Author, says:—"You have treated the subject in a very clear and logical manner, and I shall certainly recommend the book to my elementary students as the best of its kind."

**TREATISE ON SHORING AND UNDERPINNING** and generally dealing with Dangerous Structures. By C. H. STOCK, Architect and Surveyor. Third Edition, thoroughly revised by F. R. FARROW, F.R.I.B.A., fully illustrated. Large 8vo, cloth, 4s. 6d.

"The treatise is a valuable addition to the practical library of the architect and builder, and we heartily recommend it to all readers."—*Building News*.

**DANGEROUS STRUCTURES** and How to Deal with them. A Handbook of practical data concerning structural defects and the best methods of remedying them. By GEO. H. BLAGROVE, Architect and Surveyor. Second Edition, revised. With 16 diagrams and numerous tables. Crown 8vo, cloth, 3s. 6d. net.

**CONCRETE: ITS USE IN BUILDING.** By THOMAS POTTER. Second Edition, greatly enlarged. 500 pp. of Text, and 100 Illustrations. 2 vols., crown 8vo, cloth, 7s. 6d.

This work deals with walls, paving, roofs, floors, and other details of Concrete Construction, and fully describes the latest methods for rendering buildings fire-proof.

**DRY ROT IN TIMBER.** By W. H. BIDLAKE, A.R.I.B.A. With numerous Diagrams. 8vo, cloth, 1s. 6d.

## THE DRAINAGE OF TOWN AND COUNTRY

**Houses.** A Practical Account of Modern Sanitary Arrangements and Fittings for the Use of Architects, Builders, Sanitary Inspectors, and those preparing for examinations in Sanitary Science. By G. A. T. MIDDLETON, A.R.I.B.A. With a special chapter on the Disposal of Sewage on a small scale, including a description of the Bacterial Method. With 93 Illustrations. Large 8vo, cloth, 4s. 6d. net.

"A very complete exposition of the principles and details of modern practice in this branch of design and work. . . . It will well repay consultation by every one called upon to deal with the problem of domestic sanitation from the constructional side."—*The Surveyor*.

"Very reliable and practical."—*The Plumber and Decorator*.

## THE PLUMBER AND SANITARY HOUSES.

A Practical Treatise on the Principles of Internal Plumbing Work. By S. STEVENS HELLYER. Sixth Edition, revised and enlarged. Containing 30 lithographic Plates and 262 woodcut Illustrations. Thick royal 8vo, cloth, 12s. 6d.

## PRINCIPLES AND PRACTICE OF PLUMBING.

By S. STEVENS HELLYER. Fifth Edition. Containing 294 pp. of text and 180 practical illustrations. Crown 8vo, cloth, 5s.

## TECHNICAL PLUMBING.

A Handbook for Students and Practical Men. By S. BARLOW BENNETT, Lecturer on Sanitary Engineering to the Durham County Council. Second Edition, revised, with about 500 Illustrations. Large 8vo, cloth, 3s. 6d. net.

*Entirely New and Improved Edition, superseding all previous issues.*

## CLARKE'S TABLES AND MEMORANDA FOR

Plumbers, Builders, Sanitary Engineers, &c. By J. WRIGHT CLARKE, M.S.I. With a new section of Electrical Memoranda. Small pocket size, leather, 1s. 6d. net.

"It is obviously one of those things a tradesman should carry in his pocket as religiously as he does a foot rule."—*Plumber and Decorator*.

"The amount of information this excellent little work contains is marvellous."—*Sanitary Record*.

## PRACTICAL SCIENCE FOR PLUMBERS AND

Engineering Students. By J. WRIGHT CLARKE. Treating of Physics, Metals, Hydraulics, Heat, Temperature, &c., and their application to the problems of practical work. With about 200 Illustrations. Large 8vo, cloth, 5s. net.

## PUMPS: Their Principles and Construction.

By J. WRIGHT CLARKE. With 73 Illustrations. Second Edition, thoroughly revised. 8vo, cloth, 3s. 6d. net.

## HYDRAULIC RAMS: Their Principles and Construc-

tion. By J. WRIGHT CLARKE. With 36 Diagrams. 8vo, 2s.

*A thoroughly comprehensive and practical Treatise.*

**SANITARY ENGINEERING.** A Practical Treatise on the Collection, Removal and Final Disposal of Sewage, and the Design and Construction of Works of Drainage and Sewerage, with special chapters on the Disposal of House Refuse and Sewage Sludge, and numerous Hydraulic Tables, Formulæ and Memoranda, including an extensive Series of Tables of Velocity and Discharge of Pipes and Sewers. By Colonel E. C. S. MOORE, R.E., M.S.I. Second Edition, thoroughly revised and greatly enlarged. Containing 830 pp. of Text, 140 Tables, 860 Illustrations, including 92 large Folding Plates. Large thick 8vo, cloth, 32s. net.

"... The book is indeed a full and complete epitome of the latest practice in sanitary engineering, and as a book of reference it is simply indispensable."—*The Public Health Engineer*.

**WATERWORKS DISTRIBUTION.** A Practical Guide to the Laying Out of Systems of distributing Mains for the Supply of Water to Cities and Towns. By J. A. McPHERSON, A.M.Inst.C.E. Fully illustrated by 19 Diagrams and 103 other Illustrations, together with a Large Chart (29" x 20") of an Example District. Large crown 8vo, cloth, 6s. net.

**GASFITTING.** A Practical Handbook relating to the Distribution of Gas in Service Pipes, the Use of Coal Gas, and the best Means of Economizing Gas from Main to Burner. By WALTER GRAFTON, F.C.S., Chemist at the Beckton Works of the Gas Light and Coke Co. With 143 Illustrations. Large crown 8vo, cloth, 5s. net.

"The author's practical experience upon the subject of gas lighting, and gasfitters and others who are concerned in practical detail will find the book most serviceable."—*The Builder*.

**STABLE BUILDING AND STABLE FITTING.** A Handbook for the Use of Architects, Builders, and Horse Owners. By BYNG GIRAUD, Architect. With 56 Plates and 72 Illustrations in the Text. Crown 8vo, cloth, 7s. 6d.

ADOPTED AS THE TEXT-BOOK BY THE SURVEYORS' INSTITUTION.

**FARM BUILDINGS:** Their Construction and Arrangement. By A. DUDLEY CLARKE, F.S.I. With chapters on Cottages, Homesteads for Small Holdings, Iron and Wood Roofs, Repairs and Materials, Notes on Sanitary Matters, &c. Third Edition, revised and enlarged. With 52 full-page and other Illustrations of plans, elevations, sections, details of construction, &c. Crown 8vo, cloth, 6s. net.

"To architects and surveyors, whose lot it may be to plan or modify buildings of the kind, the volume will be of singular service."—*Builder's Journal*.

**RESIDENTIAL FLATS OF ALL CLASSES, including Artisans' Dwellings.** A Practical Treatise on their Planning and Arrangement, together with chapters on their History, Financial Matters, &c. With numerous Illustrations. By SYDNEY PERKS, F.R.I.B.A., P.A.S.I. With a large number of plans of important Examples by leading architects in England, the Continent, and America; also numerous Views from Special Photographs. Containing 300 pages, with 226 Illustrations. Imperial 8vo, cloth, 21s. net.

"The great monograph of the year was Mr. Perks' book on the planning of flats—a standard work of considerable importance."—*The Building News*.

"Altogether it is a book which is not only unique in architectural literature, but is one of which every page has a practical tendency. It can, therefore, be a source of profit to architects and to builders as well as to speculators."—*The Architect*.

**MODERN SCHOOL BUILDINGS, Elementary and Secondary.** A Treatise on the Planning, Arrangement and Fitting of Day and Boarding Schools. With special chapters on the Treatment of Class-Rooms, Lighting, Warming, Ventilation and Sanitation. By FELIX CLAY, B.A., Architect. Second Edition, thoroughly revised and enlarged, with many new plans and other illustrations. 556 pp. with 450 Illustrations of Plans, Perspective Views, Constructive Details and Fittings. Imperial 8vo, cloth, 25s. net.

"The book is full of valuable information carefully arranged, and the author is to be congratulated on the production of a work which should at once take rank as the standard authority on the subject."—*The Architectural Review*.

"Mr. Clay's book is of great value. It reflects great credit on his industry and is likely to remain for some time the leading work on secondary education."—*The Builder*.

**THE PLANNING AND FITTING-UP OF CHEMICAL and Physical Laboratories.** By T. H. RUSSELL, M.A., Architect. Illustrated by 36 Plans of Laboratories, Working Drawings, Sketches and Diagrams of Fittings and other Details. Demy 8vo, cloth, 7s. 6d. net.

**THE PRINCIPLES OF PLANNING.** An Analytical Treatise for the Use of Architects and others. By PERCY L. MARKS, Architect. With Notes on the Requirements of Different Classes of Buildings. Illustrated by 150 Plans, mainly of important modern Buildings. Second edition, revised and enlarged. Large 8vo, cloth, 8s. 6d. net.

"For a single-handed attempt to grapple with such a widely extending subject, the author has really done very well. His range of interests is wide; his choice of matter judicious. Labour he has clearly not stinted, and his success in arranging his large amount of material is worthy of much praise."—*The Builder*.



**ARCHITECTURAL SKETCHING AND DRAWING IN PERSPECTIVE.** A progressive series of 36 Plates, illustrating the Drawing of Architectural Details and Sketching to Scale; including chapters on the Plan and Measuring Point Methods, the Simplification of Perspective by R's method, and on Figures, Foliage, &c. By H. W. ROBERTS, Author of "R's Method." Large imperial 8vo, cloth, 7s. 6d. net.

This book provides a progressive course of perspective drawing, founded to some extent upon the well-known R's Method, showing its application to various problems of practical work. Its aim is to present perspective drawing in a simple form, and to aid the draughtsman by placing at his disposal various practical expedients to simplify the details of his work.

**THE PRINCIPLES OF ARCHITECTURAL PERSPECTIVE**, prepared for the use of Students, &c., with chapters on Isometric Drawing and the Preparation of Finished Perspectives. By G. A. T. MIDDLETON, A.R.I.B.A. Illustrated with 51 Diagrams, and 9 full-page and folding Plates, including a series of finished perspective views of buildings by various Architects. Demy 8vo, cloth, 2s. 6d. net.

**ARCHITECTURAL DRAWING.** A Text-Book with special reference to artistic design. By R. PHENE SPIERS, F.S.A. With 28 full-page and folding Plates. 4to, cloth, 8s. 6d. net.

**ALPHABETS OLD AND NEW.** Containing 200 complete Alphabets, 30 series of Numerals, and numerous facsimiles of Ancient Dates, &c., with an Essay on Art in the Alphabet. By LEWIS F. DAY. Second Edition, revised, with many new examples. Crown 8vo, cloth, 3s. 6d. net.

"Everyone who employs practical lettering will be grateful for 'Alphabets, Old and New,' Mr. Day has written a scholarly and pithy introduction, and contributes some beautiful alphabets of his own design."—*The Art Journal*.

**A HANDBOOK OF ORNAMENT.** With 300 Plates, containing about 3,000 Illustrations of the Elements and the application of Decoration to Objects. By F. S. MEYER. Third Edition, revised. Thick 8vo, cloth, 12s. 6d.

"A Library, a Museum, an Encyclopedia, and an Art School in one. The work is practically an epitome of a hundred Works on Design."—*The Studio*.

**A HANDBOOK OF ART SMITHING.** For the use of Practical Smiths, Designers, Architects, &c. By F. S. MEYER. With an Introduction by J. STARKIE GARDNER. Containing 214 Illustrations. Demy 8vo, cloth, 6s.

"An excellent, clear, intelligent, and, so far as its size permits, complete account of the craft of working in iron for decorative purposes."—*The Athenæum*.

**HOMES FOR THE COUNTRY.** A Collection of Designs and Examples of recently executed works. By R. A. BRIGGS, Architect, F.R.I.B.A., Soane Medallist, Author of "Bungalows." Containing 48 full-page Plates of Exterior and Interior Views and Plans. With descriptive notes. Demy 4to, cloth, 10s. 6d. net.

"The arrangement of the plans generally reveals a masterhand at this class of architecture."—*The Pall Mall Gazette*.

**BUNGALOWS AND COUNTRY RESIDENCES.** A Series of Designs and Examples of recently executed works. By R. A. BRIGGS, F.R.I.B.A. Fifth and Enlarged Edition, containing 47 Plates, with descriptions, and notes of cost of each house. Demy 4to, cloth, 12s. 6d.

"Those who desire grace and originality in their suburban dwellings might take many a valuable hint from this book."—*The Times*.

**A BOOK OF COUNTRY HOUSES.** Containing 62 Plates reproduced from Photographs and Drawings of Perspective Views and Plans of a variety of executed examples, ranging in size from a moderate-sized Suburban House to a fairly large Mansion. By ERNEST NEWTON, Architect. Imperial 4to, cloth, 21s. net.

The houses illustrated in this volume may be taken as representative of the English Country House of the present day. They offer much variety in their size, their sites, the character of the materials in which they are constructed, and their types of plan.

**THE COUNTRY HOUSE.** A Practical Manual of the Planning and Construction of Country Homes and their Surroundings. By CHARLES E. HOOPER. Containing 350 pp., with about 400 illustrations, comprising photographic views, plans, details, &c. Crown 4to, cloth, 15s. net.

This volume affords hints and practical advice on the selection of the site, the planning, the practical details of the construction, and the artistic treatment of the interior, and the laying-out of the grounds. It is written by an American for Americans, there is a great deal to be learned from it as to English homes, and much of the architecture illustrated is the work of some of our best English architects.

**MODERN COTTAGE ARCHITECTURE,** illustrated from Works of well-known Architects. Edited, with an Essay on Cottage Building, and descriptive notes on the subjects, by MAURICE B. ADAMS, F.R.I.B.A. Containing 50 plates reproduced from the architects' drawings, with the plans of each subject. Royal 4to, cloth, 10s. 6d. net.

"The cottages which Mr. Adams has selected would do credit to any estate in England."—*The Architect*.

"The book is a most valuable one, and a large sale. The author has been wise enough to get together a variety of examples from the works of various architects who have shown marked ability in this direct

## MODERN HOUSING IN TOWN AND COUNTRY.

Illustrated by examples of municipal and other schemes of Block Dwellings, Tenement Houses, Model Cottages and Villages, and the Garden City, together with the Plans and other illustrations of the Cottages designed for the Cheap Cottages Exhibition. By JAMES CORNES. With many Plans and Views from Drawings and Photographs, accompanied by descriptive text. Royal 4to, cloth, 7s. 6d. net.

"Its value is great. Its size enables the illustrations to be of great price, for a book so copiously illustrated, is surprisingly low; for some time to come as a standard book of reference on the

"Mr. Cornes's book is eminently succinct and serviceable, and will certainly help forward the schemes for housing reform."—*The Globe*.

"The publisher is to be congratulated on the excellent manner in which the plates have been produced. The book should be of permanent value to all concerned with the housing question, viz. members of municipal authorities, philanthropic employers, architects, and others."—*The Manchester Guardian*.

## HOUSES FOR THE WORKING CLASSES.

Comprising 52 typical and improved Plans, arranged in groups, with elevations for each group, block plans, and details. By S. W. CRANFIELD, A.R.I.B.A., and H. I. POTTER, A.R.I.B.A. With descriptive text, including Notes on the Treatment and Planning of Small Houses, Tables of Sizes of Rooms, Cubic Contents, Cost, &c. Second Edition, revised and enlarged, with many additional plans. Imperial 4to, cloth, 21s. net.

This book deals with Cottages suitable for the Working Classes in Suburban and Rural Districts. The majority of the examples illustrated consist of two and three-storey dwellings, adapted to be built in pairs, groups or terraces, and vary in cost from about £150 to £400.

"As a book of types of the best of this kind, the work is the most complete we have seen."—*The*

"The book meets a distinct want. The subject is not written round, but thoroughly threshed out; and what with good illustrations to scale, clear letterpress, and abundant tables of areas, &c., there is no lack of information for those in search of it. We congratulate the authors on their enterprise."—*The Surrey*.

## THE MODEL VILLAGE AND ITS COTTAGES: BOURNVILLE.

Illustrated by 57 Plates, consisting of 38 views from specially taken photographs, and 19 plans and details of the Village and its Cottages, with a descriptive account, and some notes on economic Cottage-building and the laying-out of Model Villages. By W. ALEXANDER HARVEY, Architect. Large 8vo, cloth, 8s. 6d. net.

In this volume special attention is given to that side of cottage building which unites taste with economy of construction. Beginning with rows of no less than eight cottages, the Author illustrates blocks of four, three, and two cottages, followed by some examples of single cottages and larger houses, the costs ranging throughout from £138 to £800, with a few typical interiors.

**A HISTORY OF ARCHITECTURE ON THE COMPARATIVE METHOD** for the Student, Craftsman, and Amateur. By BANISTER FLETCHER, F.R.I.B.A., late Professor of Architecture in King's College, London, and BANISTER F. FLETCHER, F.R.I.B.A. Containing 800 pp., with 300 full-page Illustrations, reproduced from photographs of Buildings and from specially prepared drawings of constructive detail and ornament, comprising over 2,000 Illustrations. Fifth Edition, thoroughly revised and greatly enlarged. Demy 8vo, cloth, 21s. net.

"*Par excellence* THE STUDENT'S MANUAL OF THE HISTORY OF ARCHITECTURE."—*The Architect*.

"... It is concisely written and profusely illustrated by plates of all the typical buildings of each country and period. ... WILL FILL A VOID IN OUR LITERATURE."—*Building News*.

"... AS COMPLETE AS IT WELL CAN BE."—*The Times*.

**THE ORDERS OF ARCHITECTURE.** Greek, Roman and Italian. A selection of typical examples from Normand's Parallels and other Authorities, with notes on the Origin and Development of the Classic Orders and descriptions of the plates, by R. PHÉNÉ SPIERS, F.S.A., Master of the Architectural School of the Royal Academy. Fourth Edition, revised and enlarged, containing 27 full-page Plates, seven of which have been specially prepared for the work. Imperial 4to, cloth, 10s. 6d.

"An indispensable possession to all students of architecture."—*The Architect*.

**THE ARCHITECTURE OF GREECE AND ROME.**

A SKETCH OF ITS HISTORIC DEVELOPMENT. By W. J. ANDERSON, Author of "The Architecture of the Renaissance in Italy," and R. PHÉNÉ SPIERS, F.S.A. Containing 300 pages of text, and 185 Illustrations from photographs and drawings, including 43 full-page Plates, of which 27 are finely printed in collotype. Large 8vo, cloth, 18s. net.

"It is such a work as many students of architecture and the classics have vainly yearned for, and lost precious years in supplying its place."—*The Architect*.

"The whole conveys a vivid and scholarly picture of classic art."—*The British Architect*.

**THE ARCHITECTURE OF THE RENAISSANCE IN ITALY.** A General View for the Use of Students and Others. By WILLIAM J. ANDERSON, A.R.I.B.A. Third Edition, containing 64 full-page Plates, mostly reproduced from Photographs, and 98 Illustrations in the Text. Large 8vo, cloth, 12s. 6d. net.

"A delightful and scholarly book, which should prove a boon to architects and students."—*Journal R.I.B.A.*

"Should rank amongst the best architectural writings of the day."—*The Edinburgh Review*.

A NEW AND EPOCH-MAKING BOOK.

**GOTHIC ARCHITECTURE IN ENGLAND.** An Analysis of the origin and development of English Church Architecture, from the Norman Conquest to the Dissolution of the Monasteries. By FRANCIS BOND, M.A., Hon. A.R.I.B.A., Containing 800 pp., with 1,254 Illustrations, comprising 785 photographs, sketches, and measured drawings, and 469 plans, sections, diagrams, and moldings. Imperial 8vo. 31s. 6d. net.

"The fullest and most complete illustrated treatise on the subject which has yet appeared. . . . It is a book which every student of architecture, professional or amateur, ought to have."—*The Builder*.

"The most complete and thorough, this great book leaves nothing to be desired."—*News*.

"It brings the study of architecture up to the standard of modern ideals, and should, we expect, long remain the best book of its kind in the language."—*The British Architect*.


**EARLY RENAISSANCE ARCHITECTURE IN ENGLAND.** An Historical and Descriptive Account of the Tudor, Elizabethan and Jacobean Periods, 1500—1625. By J. ALFRED GOTCH, F.S.A. With 88 photographic and other Plates and 230 Illustrations in the Text from Drawings and Photographs. Large 8vo, cloth, 21s. net.


"A more delightful book for the architect it would be hard to find. The author's well-chosen illustrations and careful, well-written descriptions hold one's interest over the whole 236 pages of the book. Mr. Gotch shows how the pure Gothic through Tudor, Elizabethan, and Jacobean phases, when distinct features retained the mastery over our English work. The book is quite a storehouse of reference and illustration, and should be quite indispensable to the architect's library."—*The British Architect*.

**CLASSIC ARCHITECTURE.** A Series of Ten Plates (size 20 in. x 15 in.) of examples of the Greek and Roman Orders, with full details and a Selection of Classic Ornament. By CHARLES F. MITCHELL and GEORGE A. MITCHELL, Lecturers on Architecture, Regent Street Polytechnic, W. With descriptive letterpress, in portfolio, price 6s. net, or the Set of 10 plates without text or portfolio, price 5s. net.

The Examples illustrated are as follows:—Plate I.—Doric Order from the Parthenon, Athens. II.—Ionic Order from the Erechtheion, Athens. III. Corinthian Order from the Monument of Lysicrates, Athens. IV.—Tuscan Order, with Portion of Arcade, based upon the design of Barozzi of Vignola. V.—Doric Order from the Theatre of Marcellus, Rome. VI.—Ionic Order from the Temple of Fortuna Virilis. VII.—Corinthian Order from the Temple of Castor and Pollux (Jupiter Stator), Rome. VIII.—Composite Order from the Arch of Septimius Severus, Rome. IX.—Examples of Greek Ornament. X.—Typical Roman Ornament from Buildings in Rome.

**B. T. BATSFORD, 94, HIGH HOLBORN, LONDON.**





Central Archaeological Library,  
NEW DELHI.

20147

Call No. 721.12 02/5to

Author— *Stock, C-H.*

Title— *A Treatise on Shorting  
and Underpinning*

Borrower No.

Date of Issue

Date of Return

*"A book that is shut is but a block"*

CENTRAL ARCHAEOLOGICAL LIBRARY  
GOVT. OF INDIA  
Department of Archaeology  
NEW DELHI

Please help us to keep the book  
clean and moving.